

A GUIDE TO ADJUSTING SU AND AU HINGES

www.andres.glass



- By adjusting the hinges, it is possible to move the door glass in lateral directions, either towards the lock or the hinges.
- The maximum adjustment range is 5 mm.
- Adjustment requires 5 mm and 3 mm Allen keys, which are not included in the product package.

A GUIDE TO ADJUSTING:

Loosen the glass fixing screw (2) one full turn with the Allen key (3).

Moving the door glass towards the roller lock

1. Turn the lock-side hinge adjustment screw (4) counterclockwise to the required amount using the Allen key (6). One full turn of the screw counterclockwise moves the glass 1 mm towards the lock.
2. Once the glass is in the required position, tighten the opposite screw (5) firmly.
3. Tighten the glass fixing screw (2) firmly.
4. Finally, tighten the opposite screw (5) and place the cover (1) on the hinge.

Moving the door glass towards the hinges

1. Turn the adjustment screw (5) located further from the roller lock counterclockwise as necessary.
2. Once the glass is in the required position, tighten the opposite screw (4) firmly.
3. Tighten the glass fixing screw (2) firmly.
4. Finally, tighten the opposite screw (4) and place the cover (1) on the hinge.

