

## BELLA BATHROOM GLASS INSTALLATION INSTRUCTIONS

EN [www.andres.glass](http://www.andres.glass)



**PLEASE HANDLE AND INSTALL THE GLASS WITH CARE, AS TEMPERED GLASS CAN BREAK IF ITS CORNERS AND EDGES CONTACT A HARD SURFACE!**

**Before installing or using the product, read the installation, use, maintenance and warranty instructions.**



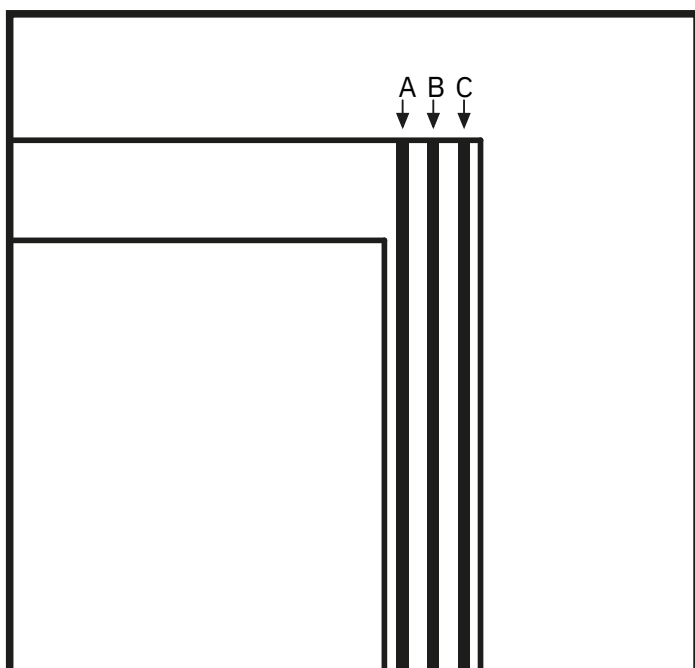


Figure 1: Top view

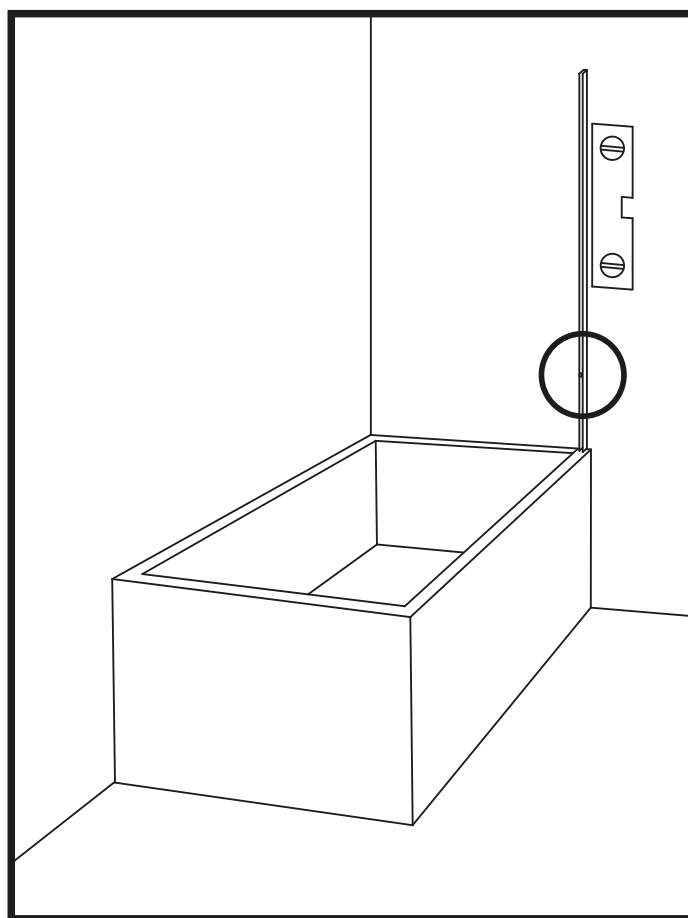


Figure 2

1. Choose a suitable place for the glass on the edge of the bathtub. (Fig 1)

2. Using a level, place the hinge bar profile vertically on the wall so that the edge is flush with the edge of the bathtub. (Fig 2)

3. Mark the holes in the profile (the locations of the dowel holes) on the wall and remove the profile from the wall. If marks remain on the edges of the ceramic tiles, try turning the channel the other way and making the marks again.

4. Drill holes in the marked locations for the dowels included in the kit. Use a dedicated router bit or a drill without impact mode to avoid damaging the ceramic tiles.

5. Clean the holes and the wall from dust and push the dowels into the drilled holes so that the outer end of the dowel is flush with the wall.

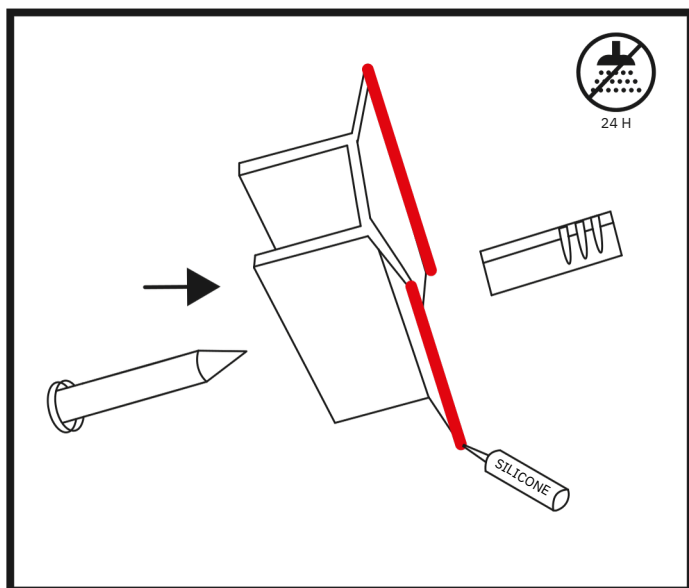


Figure 3

6. To attach the profile, apply silicone to the edges of the profile and place it on the wall, according to the previously marked locations. (Fig 3)

7. Secure the profile with screws. Remove any excess silicone that has squeezed out between the glass and the channel.

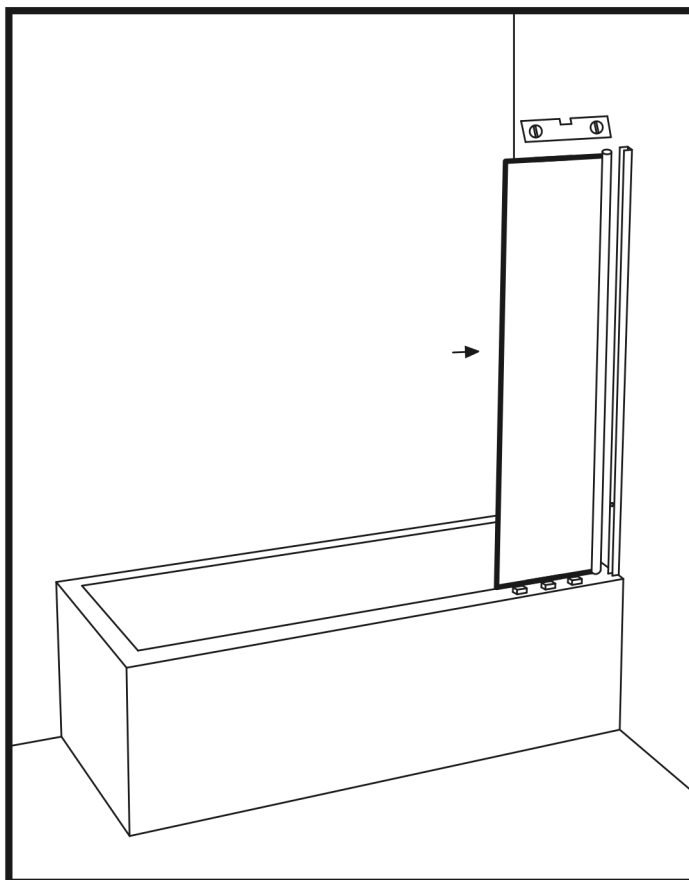


Figure 4

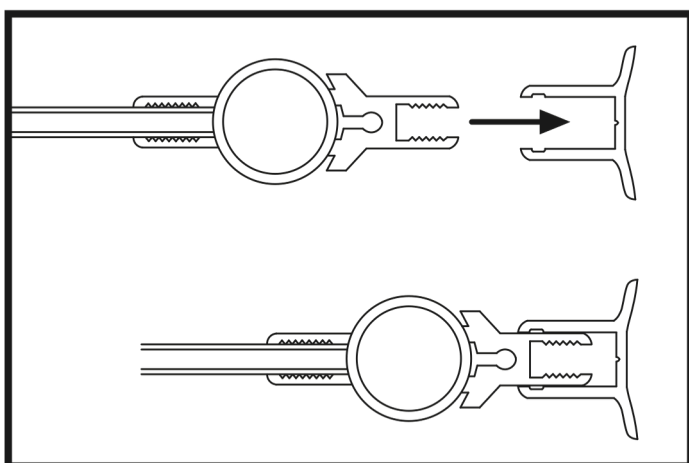


Figure 5

8. Place wooden blocks (max. thickness 10 mm) on the edge of the bathtub, where you can support the glass in the package, with a mono-hinge already installed by the manufacturer. (Fig 4)

9. Carefully support the glass with its bottom edge on the blocks. Move the glass with a mono-hinge into the wall-mounted hinge bar profile, facing the wall.

10. Make sure that the glass is fixed in the correct position inside the hinge bar profile and that the edge of the glass is level. (Fig 5)

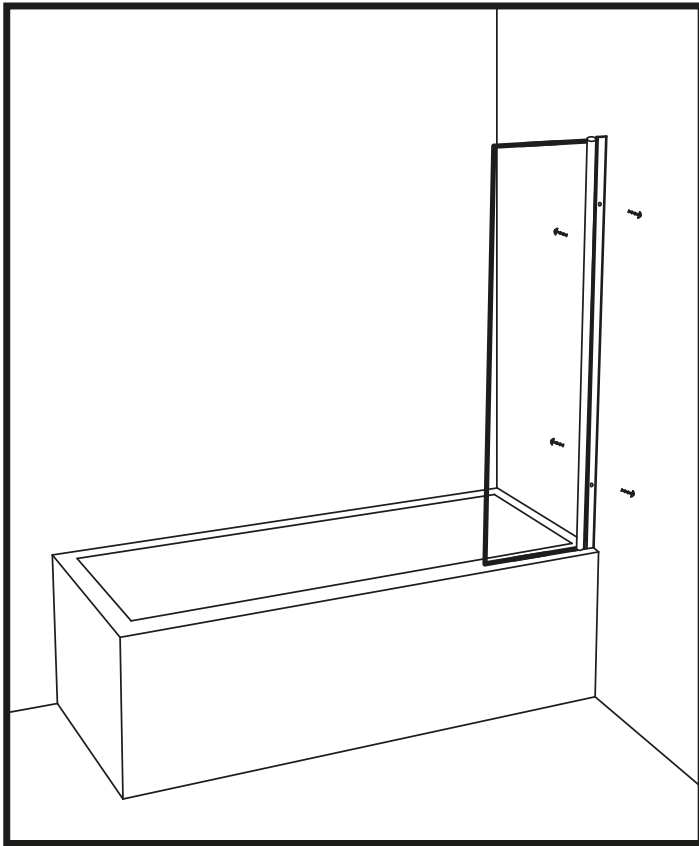


Figure 6

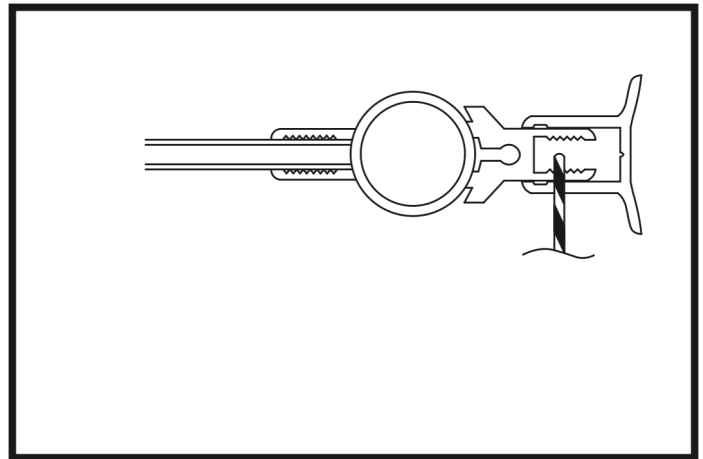


Figure 7

11. Mark the screw attachment points on the profile both inside and outside the bathtub. Measure and make marks, on one side of the profile, about 10 cm from the bottom and from the top, and on the other side of the profile, about 20 cm from the bottom and from the top. (Fig 6)

NB! In order for the bathtub glass to stay firmly in place, it is important that the screws are not attached one above the other.

12. Start by drilling the top hole, through the hinge bar profile and the hinge. Drill the holes carefully so that the drill only passes through one half of the profiles, not the entire product. (Fig 7)

13. Attach the hinge to the hinge bar profile by screwing the stainless steel screws (4 pcs) included in the kit into the drilled holes and add the decorative covers.

NB! Do not overtighten the screws! Overtightening may cause the screws to break and damage the profile.

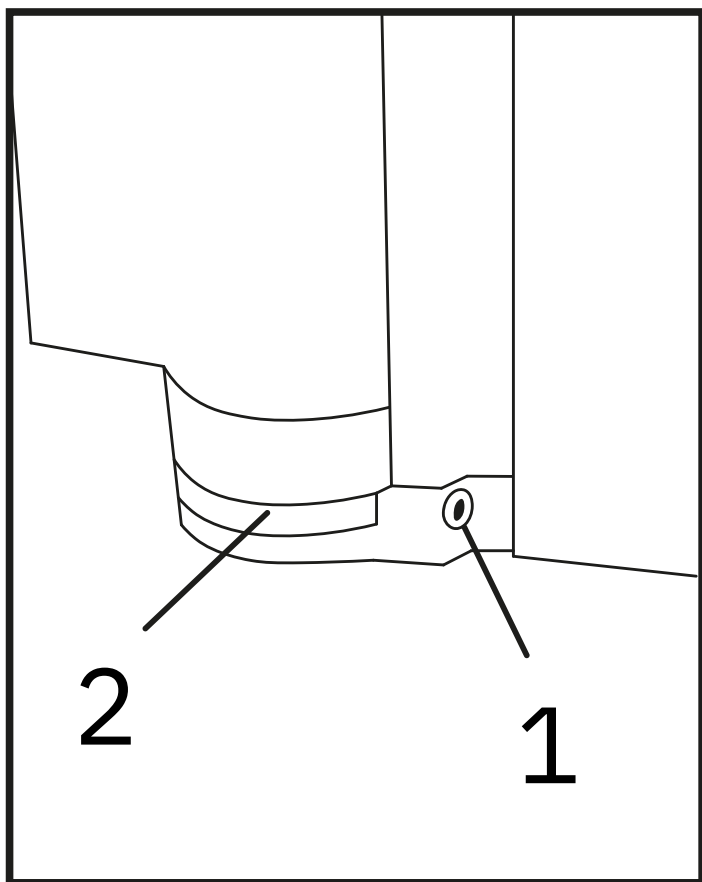


Figure 8

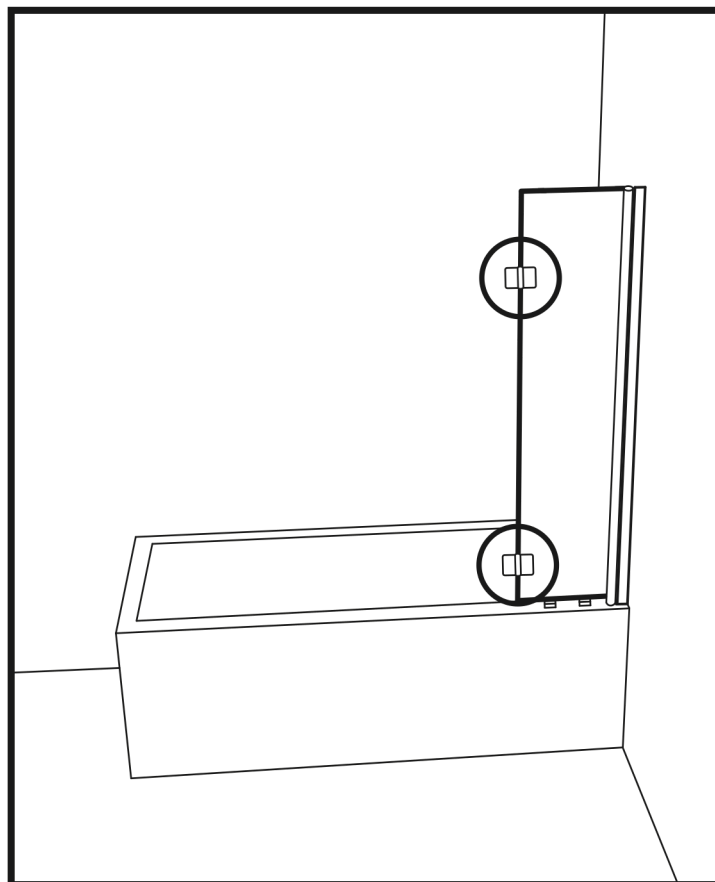


Figure 9

14. To adjust the mono hinge, loosen both washer mounting screws (1) a few turns using the included hex key. (Fig 8)

15. Move the glass (2) to the desired position where you want to fix the door.

16. When the glass (2) is in the desired position, tighten the washer fixing screws (1).

NB! Do not overtighten the screws!  
Overtightening may cause the screws to break and damage the profile.

17. Install the hinges to the glass using the screws provided in the kit. (Fig 9)

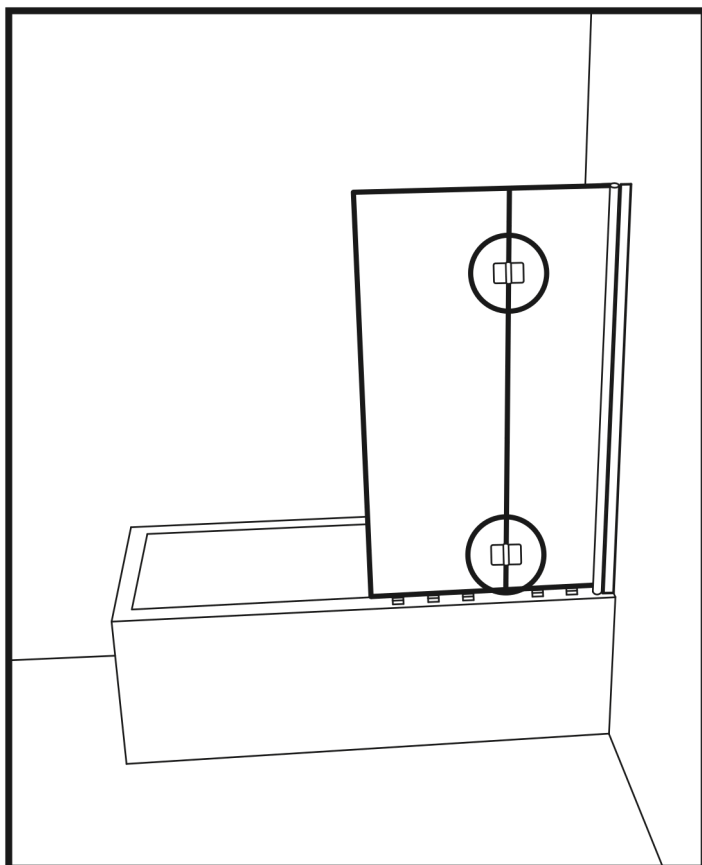


Figure 10

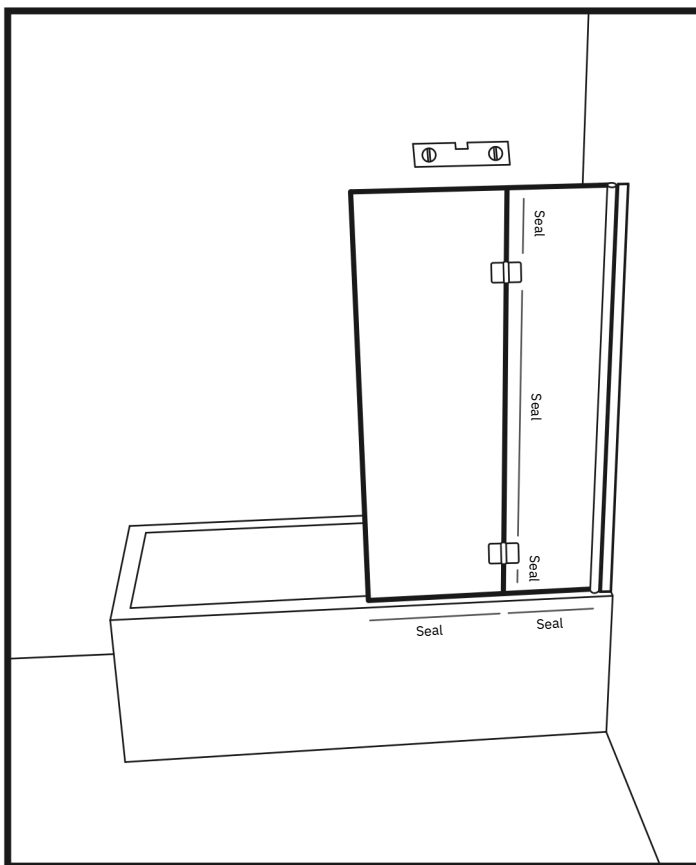


Figure 11

18. Take the larger glass from the package and carefully lift it onto the edge of the bathtub, onto the wooden blocks. (Fig 10)

19. Connect the glasses with the hinges that have already been installed.

20. Remove the wooden blocks.

21. Make sure that the top edge of the glasses is level and the sides between the glasses are parallel. There should be a gap of approximately 5 mm between the glasses for installing the gaskets. (Fig 11)

22. Install the gaskets included in the kit on the lower edges of the glasses and between the two glasses.

23. Install a handle on the glass if a solution with a handle was ordered.

24. If the installed channels have protective films on them, remove them.