

## FLAVIA SHOWER DOOR INSTALLATION INSTRUCTIONS

EN [www.andres.glass](http://www.andres.glass)



**PLEASE HANDLE AND INSTALL THE GLASS WITH CARE, AS THE TEMPERED GLASS CAN BREAK IF ITS CORNERS AND EDGES COME INTO CONTACT WITH A HARD SURFACE!**

**Before installing or using the product, read the installation, usage, maintenance and warranty instructions.**



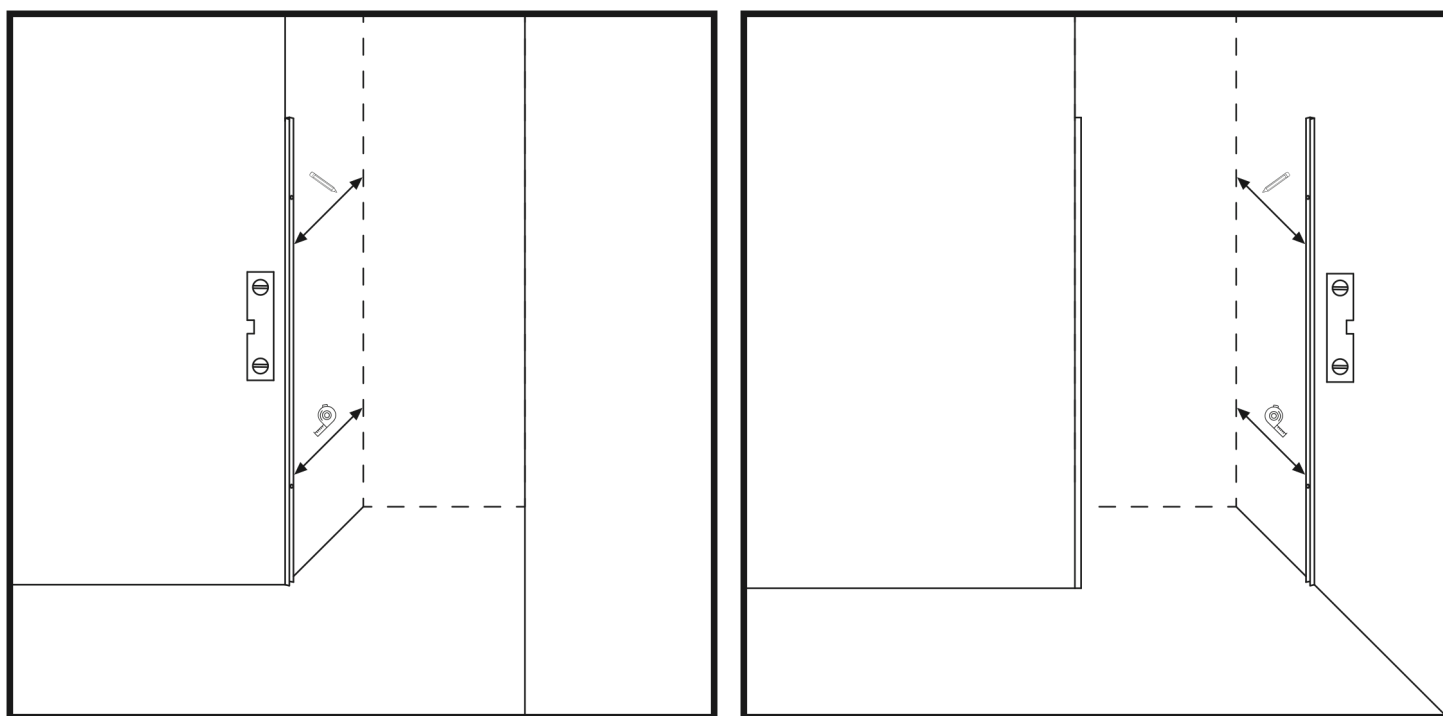


Figure 1

1. Start the installation by installing the hinge bar profile of both doors to the wall. Repeat the following steps on both sides. (Figure 1)
2. Measure the distance of the hinge bar profile from the parallel wall where you want to install the door, based on the projected location of your shower door, and make markings.
3. Using a level, place the hinge profile vertically on the wall so that the edge is flush with the floor.
4. Mark the holes in the profile (the locations of the dowel holes) on the wall and remove the profile from the wall. If marks remain on the edges of the ceramic tiles, try turning the profile the other way and making the marks again.
5. Drill holes in the marked locations for the dowels included in the kit. Use the designated milling cutter or a drill without hammer mode to avoid damaging the ceramic tiles.
6. Clean the holes and the wall from dust and push the dowels into the drilled holes so that the outer end of the dowel is flush with the wall.

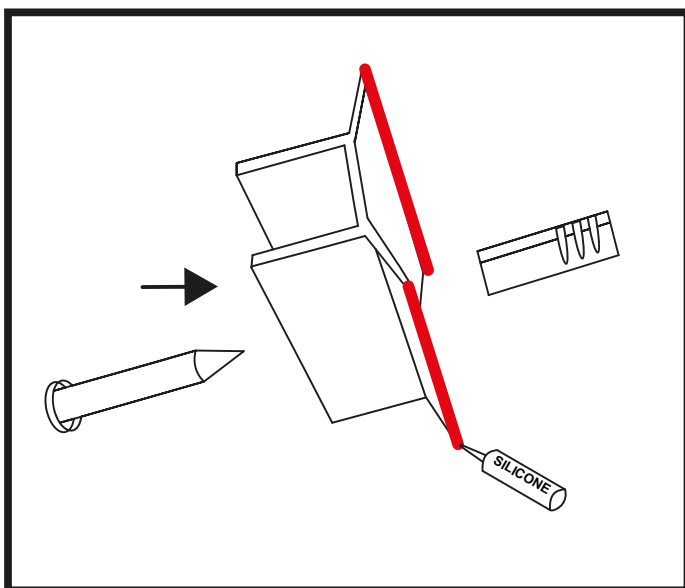


Figure 2

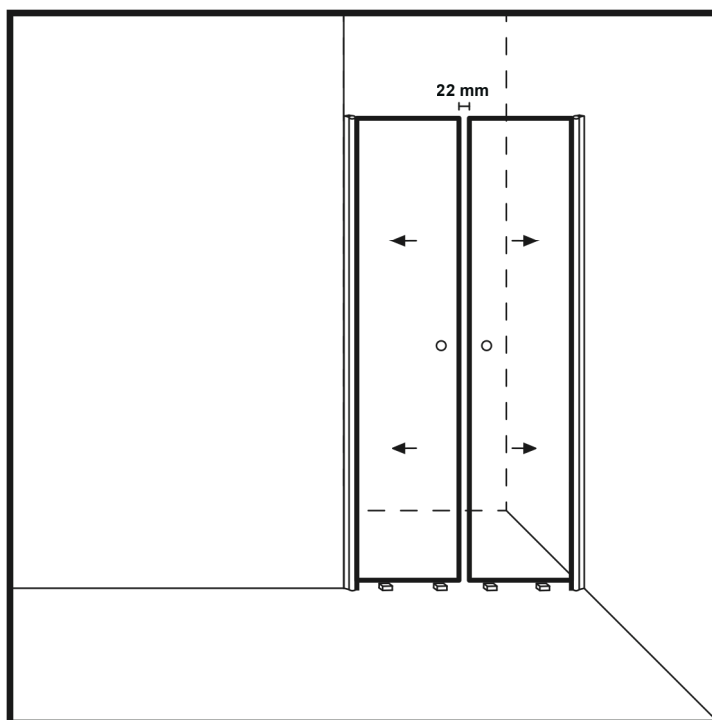


Figure 3

7. To attach the profile, apply silicone to the edges of the profile and place it on the wall, according to the previously marked locations. (Figure 2)

8. Secure the profile with screws. Remove any excess silicone that has been squeezed out between the glass and the U-profile.

9. Place wooden blocks (max. thickness 1 cm) on the floor, where you can support the door glass in the package, which has a mono-hinges already installed by the manufacturer. (Figure 3)

NB! Make sure that the glass does not come into contact with the floor tiles, as it is tempered glass and may shatter upon impact!

10. Before installing the door glass, make sure that after adding the door glass, there is a gap of approximately 22 mm between the doors, where the seal will later fit.

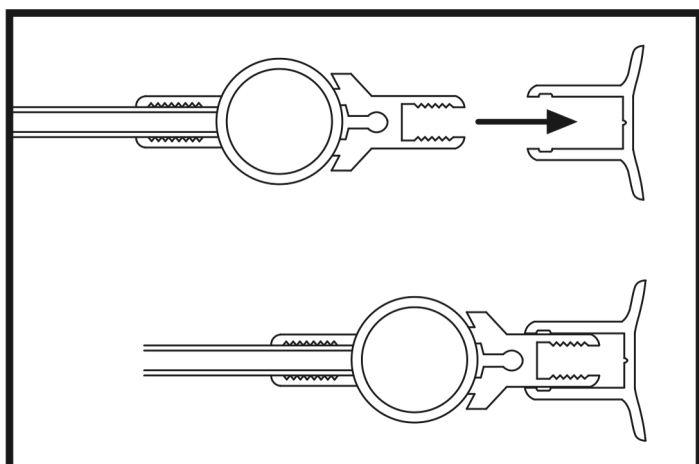


Figure 4

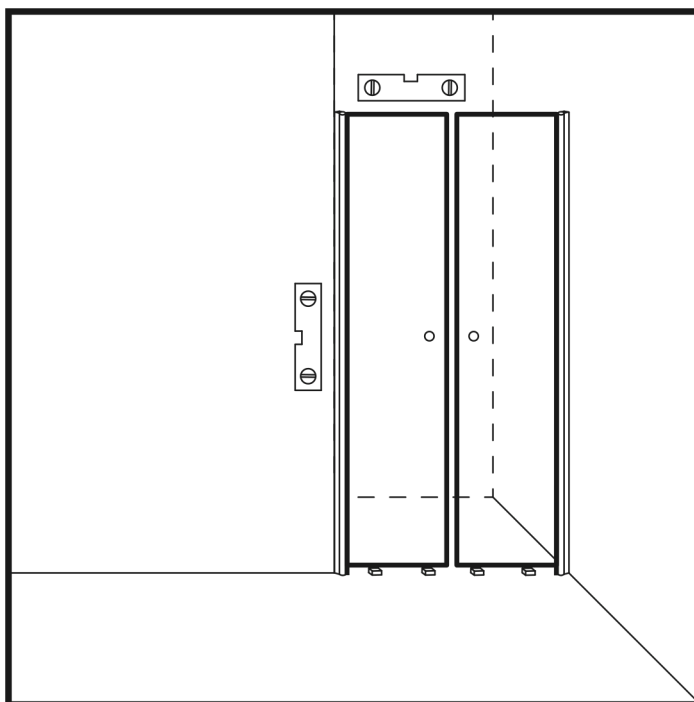


Figure 5

11. Carefully rest the bottom edge of the glass on the support blocks. Slide the mono-hinged glass into the wall-mounted hinge profile, with the movement directed toward the wall. (Figure 4)

12. Make sure that the glass is properly secured inside the hinge profile and that the edge of the glass is plumb. (Figure 5)

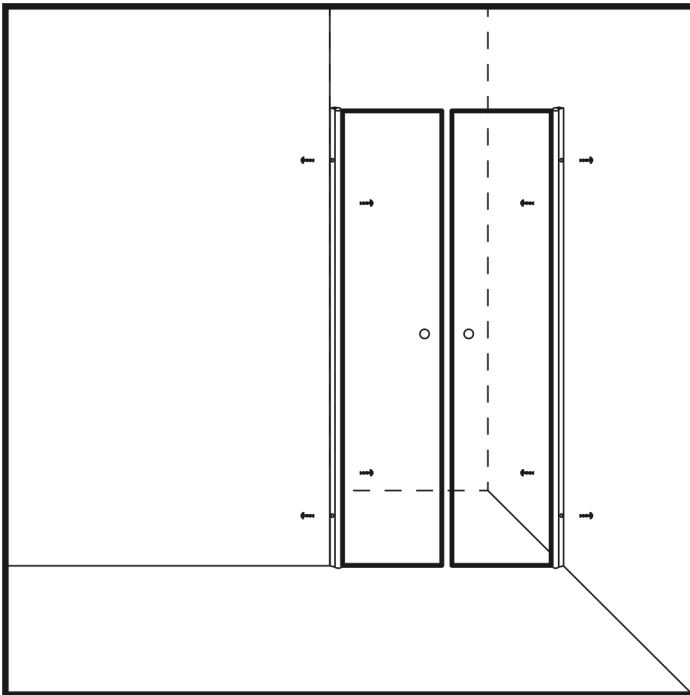


Figure 6

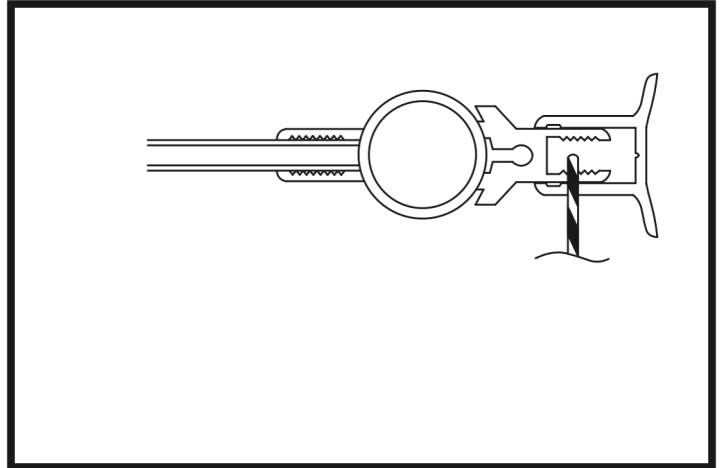


Figure 7

13. Mark the screw mounting positions on the profile from both inside and outside the shower. Measure and mark one side of the profile about 10 cm from the top and bottom, and the other side at about 20 cm. (Figure 6)

NB! To ensure the shower glass stays firmly in place, it is important that the screws are not aligned with each other.

14. Begin by drilling the top hole, going through both the hinge profile and the hinge. Drill the holes carefully so that the drill only passes through one half of the profiles, not the entire product. (Figure 7)

15. Before tightening the screws, make sure the glasses are parallel.

16. Attach the hinge to the hinge profile by screwing the stainless steel screws (4 pcs) included in the kit into the drilled holes and add the decorative covers.

NB! Do not overtighten the screws!  
Overtightening may cause the screws to break and damage the profile.

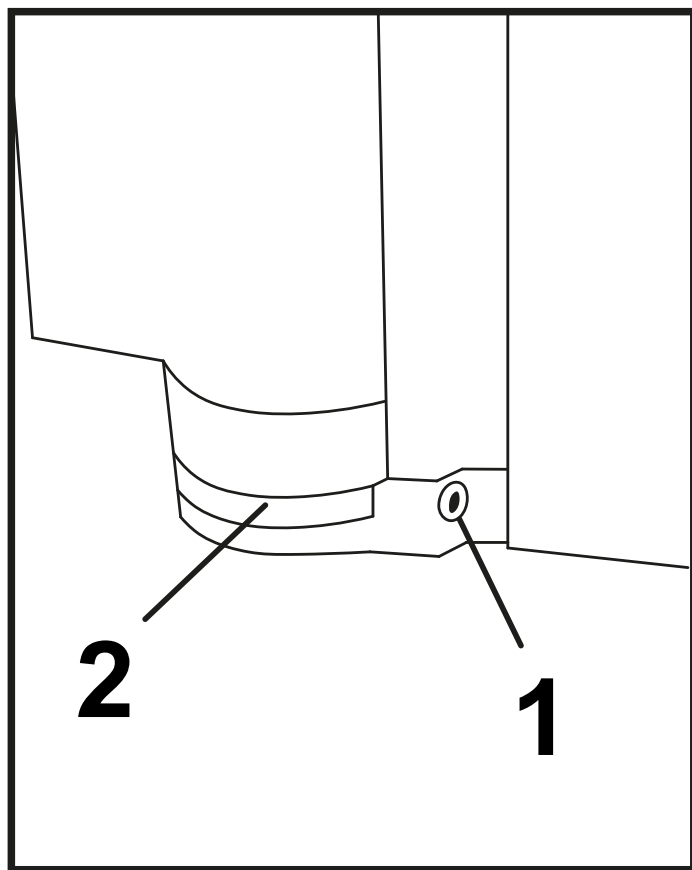


Figure 8

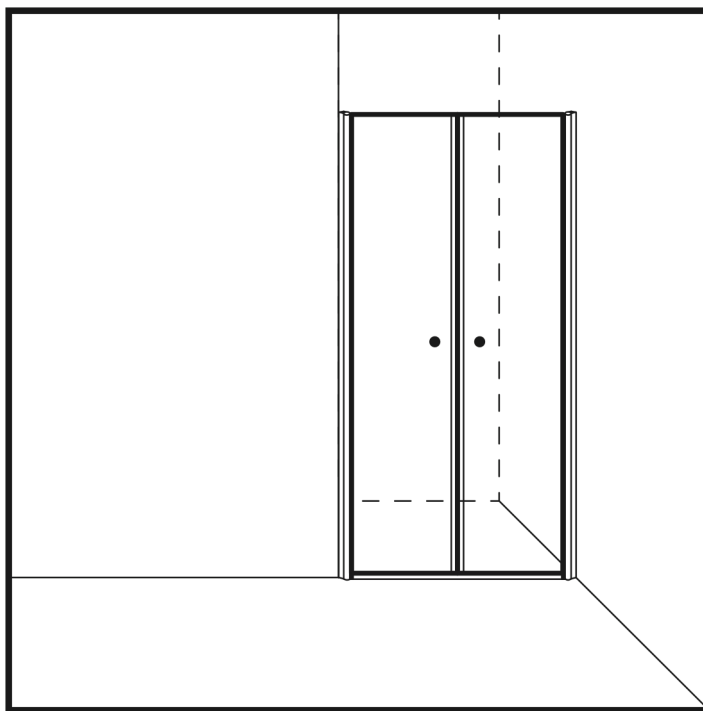


Figure 9

17. To adjust the mono hinge, loosen both mounting screws (1) on the washer by a few turns using the included Allen key. (Figure 8)

18. Move the glass (2) to the desired position where you want to secure the door.

19. Once the glass (2) is in the desired position, tighten the washer mounting screws (1).

NB! Do not overtighten the screws!  
Overtightening may cause the screws to break and damage the profile.

20. Remove the blocks from under the glass. (Figure 9)

21. Install the brush seals included in the packages on the lower edges of the door glass and the magnetic seals between the two doors.

22. Install the handles included in the package.

23. If the installed profiles have protective films on them, remove them.