

FRESCO BATHROOM GLASS INSTALLATION INSTRUCTIONS

EN www.andres.glass



PLEASE HANDLE AND INSTALL THE GLASS WITH CARE, AS TEMPERED GLASS CAN BREAK IF ITS CORNERS AND EDGES CONTACT A HARD SURFACE!

Before installing or using the product, read the installation, use, maintenance and warranty instructions.



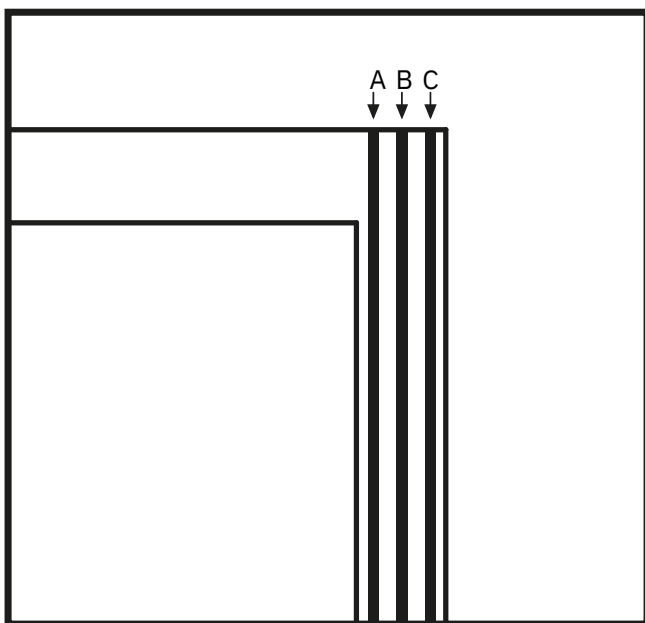


Figure 1: Top view

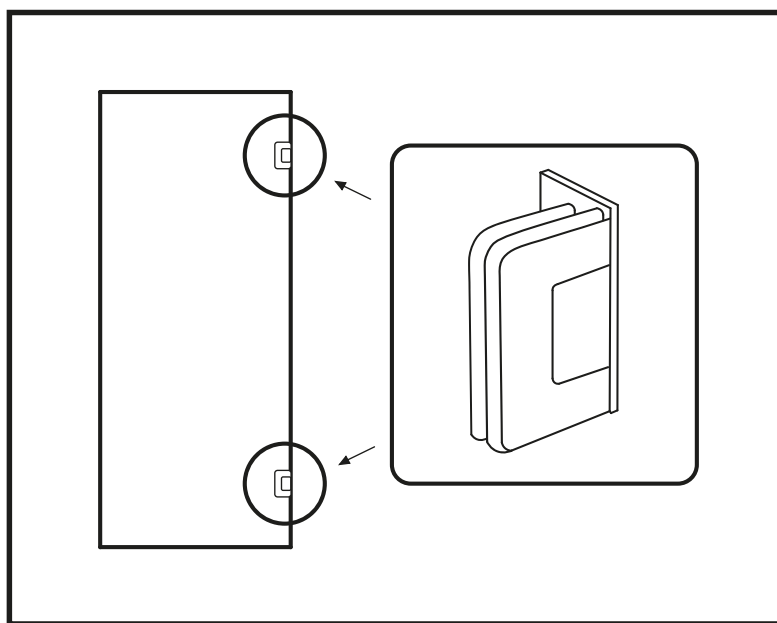


Figure 2

1. Choose a suitable location for the bathtub glass on the edge of the bathtub. (Fig 1)

2. Take the hinges included in the kit and attach them to the glass using the screws provided in the kit. (Fig 2)

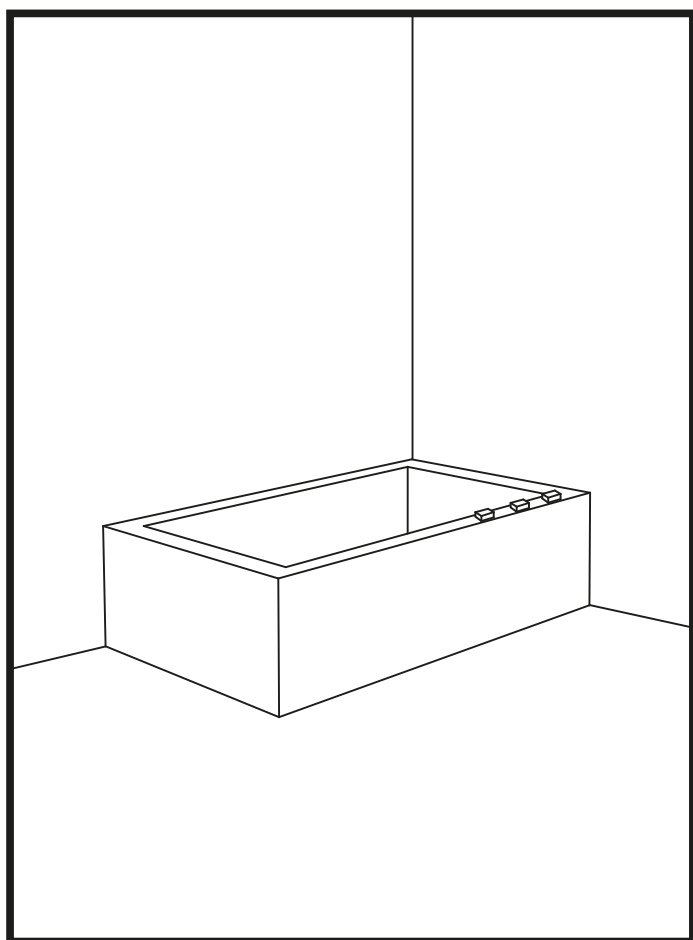


Figure 3

3. Place wooden blocks (maximum thickness 10 mm) on the edge of the bathtub to support the bathtub glass included in the package. (Fig 3)

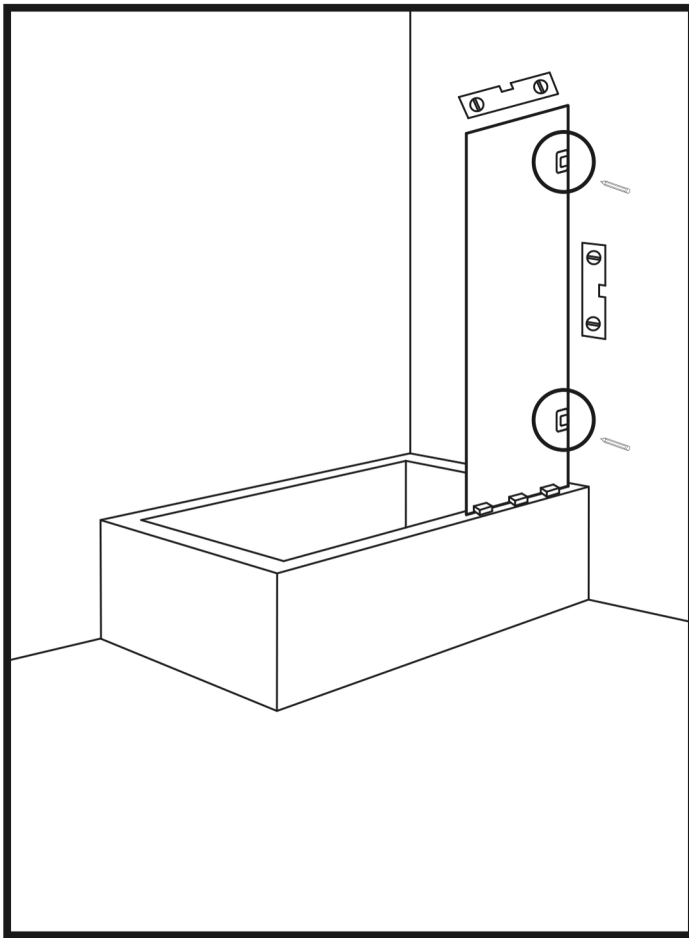


Figure 4

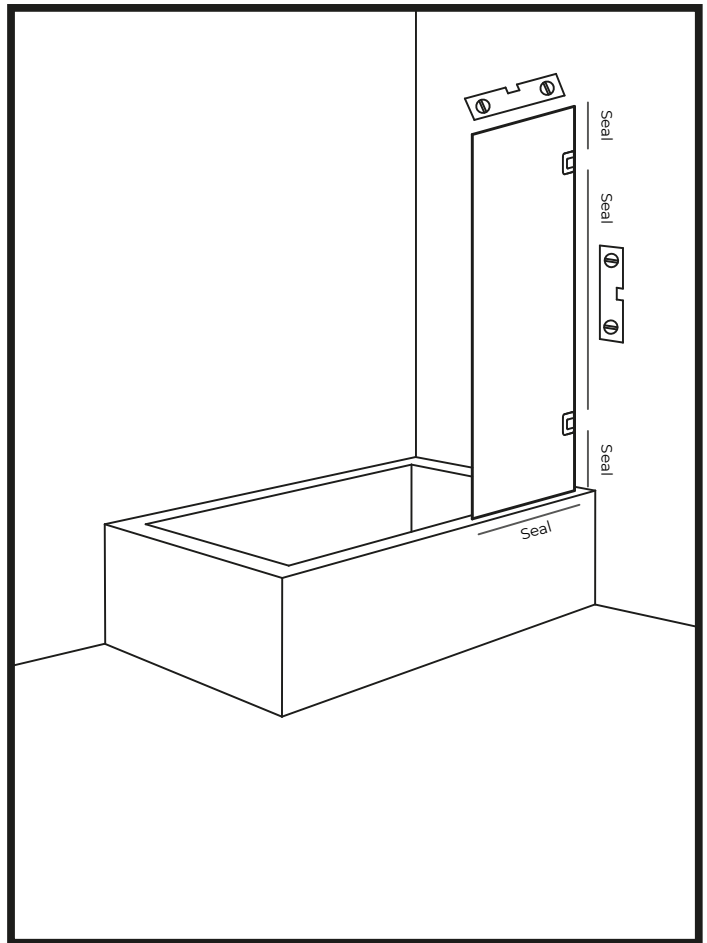


Figure 5

4. Place the bathtub glass vertically on the wall using a level. Make sure that below the glass there is a gap of approximately 10-13 mm to the edge of the bathtub.

5. Mark the holes in the hinges (the locations of the dowel holes) on the wall and remove the glass. (Fig 4)

6. Drill holes in the marked locations for the dowels included in the kit. Use a dedicated router bit or a drill without impact mode to avoid damaging the ceramic tiles.

7. Clean the holes and the wall from dust and push the dowels into the drilled holes so that the outer end of the dowel is flush with the wall.

8. Place the bathtub glass on the wall and secure the hinges with screws.

9. Install the brush seal included in the kit on the bottom edge of the glass. (Fig 5)

10. Take the longer gasket included in the kit and cut it into the correct lengths for the side of the hinge and wall. Cut out three different parts and install them.

11. Use a spirit level to check that the glass is straight and secure the hinges.

12. If the installed channels have protective films on them, remove them.