

PRELUDE SHOWER DOOR INSTALLATION INSTRUCTIONS

EN www.andres.glass



PLEASE HANDLE AND INSTALL THE GLASS WITH CARE, AS THE TEMPERED GLASS CAN BREAK IF ITS CORNERS AND EDGES COME INTO CONTACT WITH A HARD SURFACE!

Before installing or using the product, read the installation, usage, maintenance and warranty instructions.



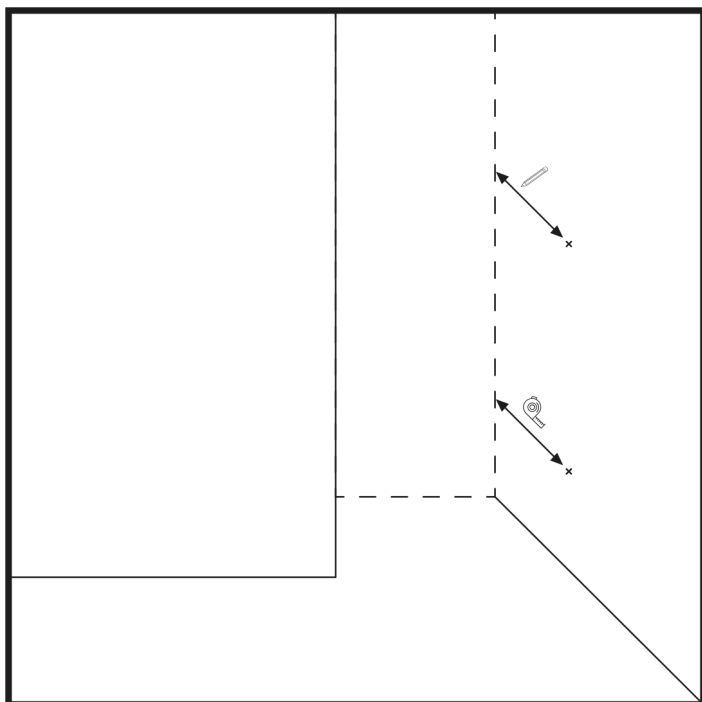


Figure 1

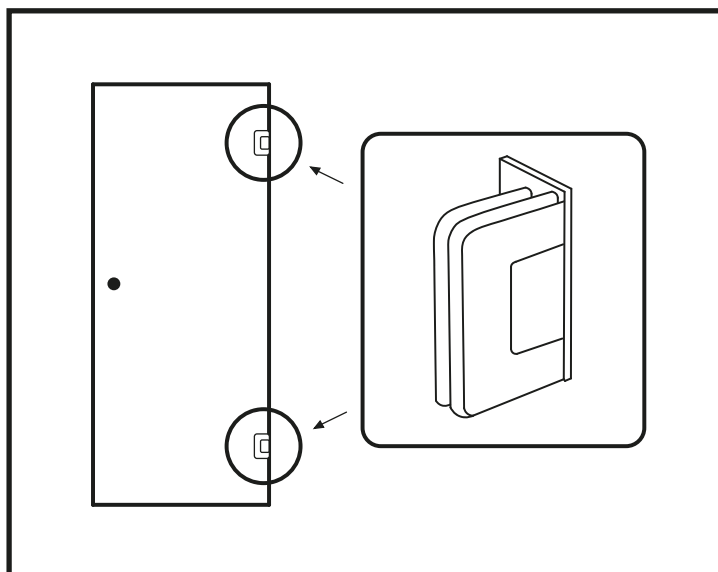


Figure 2

1. Choose the distance of the shower door to be installed from the opposite wall according to your wishes, based on the designed location of your shower door. Measure the required distance from the corner of the wall and make a mark. (Figure 1)

2. Take the hinges included in the kit and attach them to the glass using the screws provided. (Figure 2)

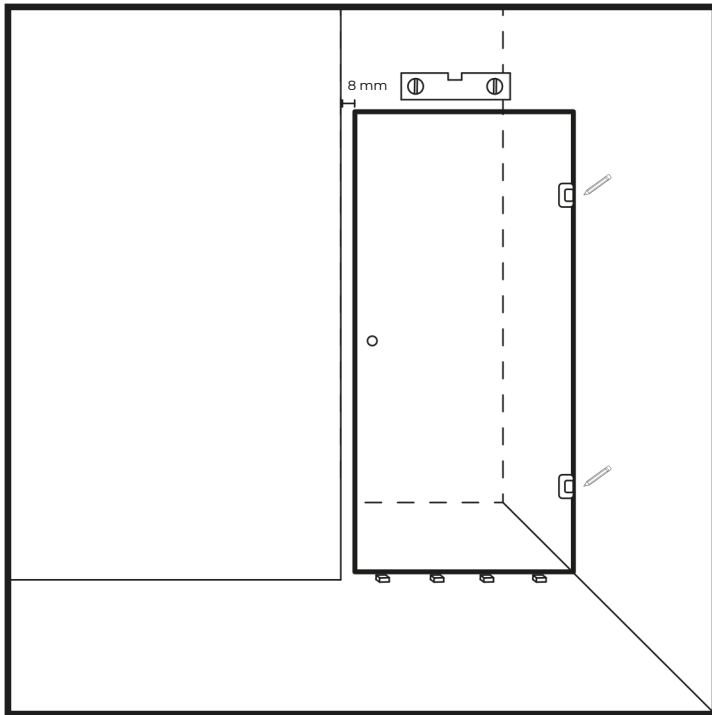


Figure 3

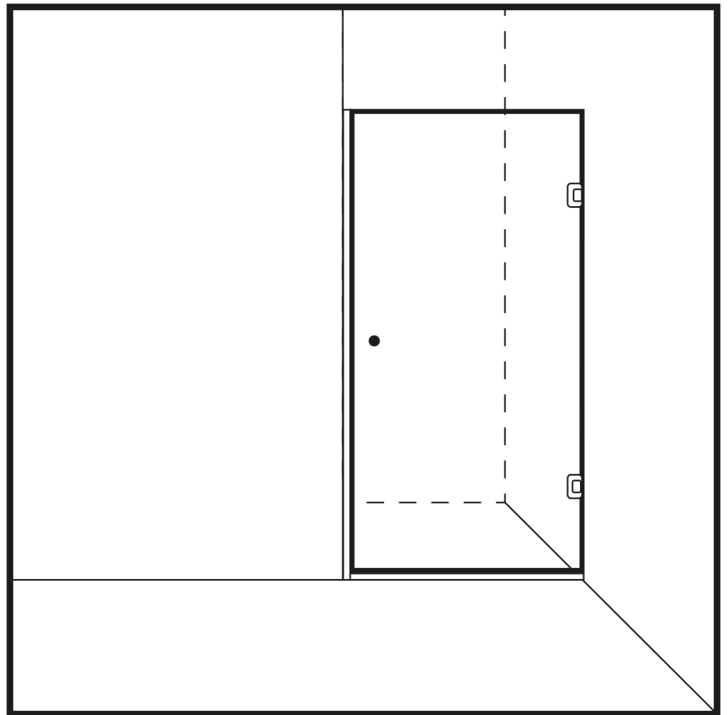


Figure 4

3. Place wooden blocks (max. thickness 10 mm) on the floor where you can support the hinged door glass. (Figure 3)

NB! Make sure that the glass does not come into contact with the floor tiles, as it is tempered glass and may shatter upon impact!

4. Before installing the door glass, make sure that after adding the door glass, there is a gap of approximately 8 mm between the door and the opposite wall, where the magnetic seal will later fit.

5. Place the door glass vertically on the wall using a spirit level. Make sure that there is a gap of approximately 10-13 mm below the glass to the edge of the floor. Mark the holes in the hinges (the locations of the dowel holes) on the wall and remove the glass.

6. Drill holes in the marked locations for the dowels included in the kit. Use the designated milling cutter or a drill without hammer mode to avoid damaging the ceramic tiles. Clean the holes and the wall from dust and push the dowels into the drilled holes so that the outer end of the dowel is flush with the wall.

7. Place the door glass on the wall and secure the hinges with screws. Use a spirit level to make sure the door is level.

8. Install the brush seal included in the kit on the bottom edge of the glass. Install the longer magnetic seal on the outer vertical side of the door glass. The seal is intended for the vertical side of the door glass on the hinge side. Cut pieces of it to the correct lengths and install them. (Figure 4)

9. Install the handle included in the package.

10. If the installed profiles have protective films on them, remove them.