

ALEXA SHOWER ENCLOSURE INSTALLATION INSTRUCTIONS

EN www.andres.glass



PLEASE HANDLE AND INSTALL THE GLASS WITH CARE, AS THE TEMPERED GLASS CAN BREAK IF ITS CORNERS AND EDGES COME INTO CONTACT WITH A HARD SURFACE!

Before installing or using the product, read the installation, usage, maintenance and warranty instructions.



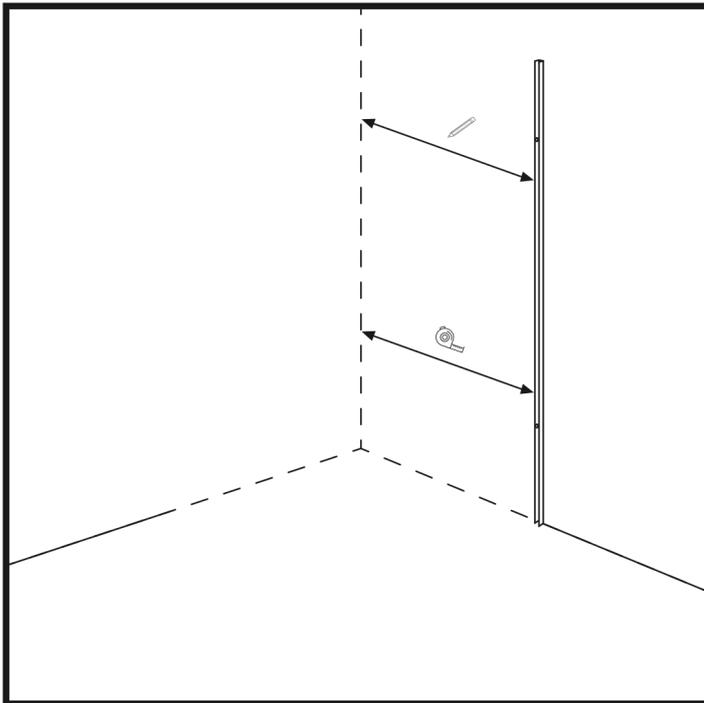


Figure 1

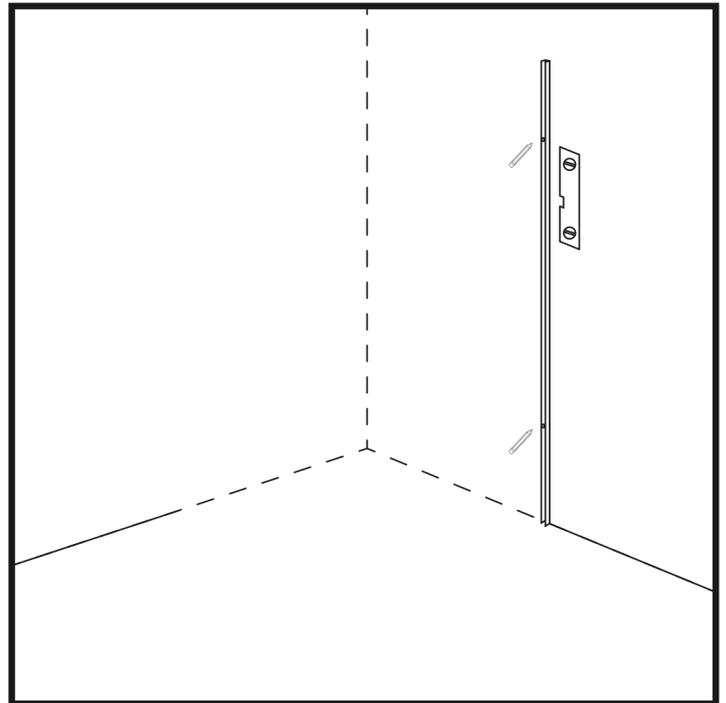


Figure 2

1. Before starting the installation, double-check all measurements. Since the shower enclosure consists of four separate glass panels, measure each part carefully and mark the exact positions according to your planned layout.

2. Measure the distance of the hinge bar profile from the parallel wall according to the planned shower enclosure and make a mark. (Figure 1)

3. Using a spirit level, place the hinge bar profile vertically on the wall so that the edge is flush with the edge of the floor. (Figure 2)

4. Mark the holes in the profile (the locations of the dowel holes) on the wall and remove the profile from the wall. If marks remain on the edges of the ceramic tiles, try turning the profile the other way and making the marks again.

5. Drill holes in the marked locations for the dowels included in the kit. Use the designated milling cutter or a drill without hammer mode to avoid damaging the ceramic tiles.

6. Clean the holes and the wall from dust and push the dowels into the drilled holes so that the outer end of the dowel is flush with the wall.

EN 

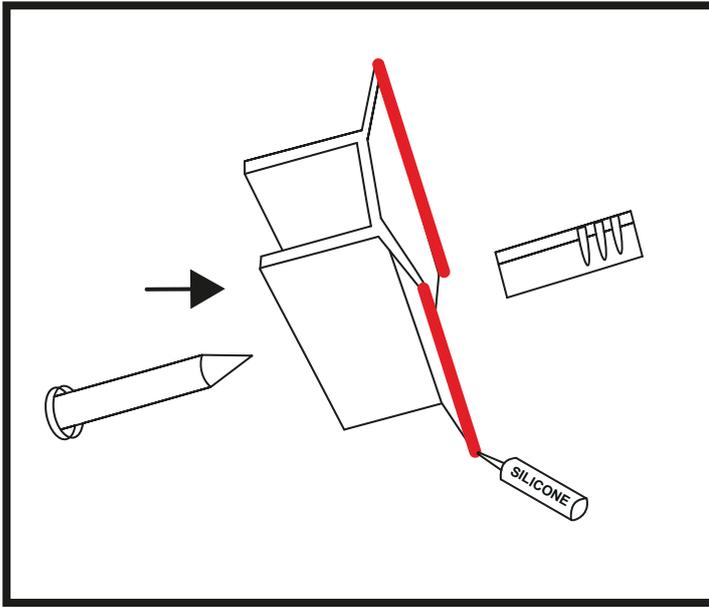


Figure 3

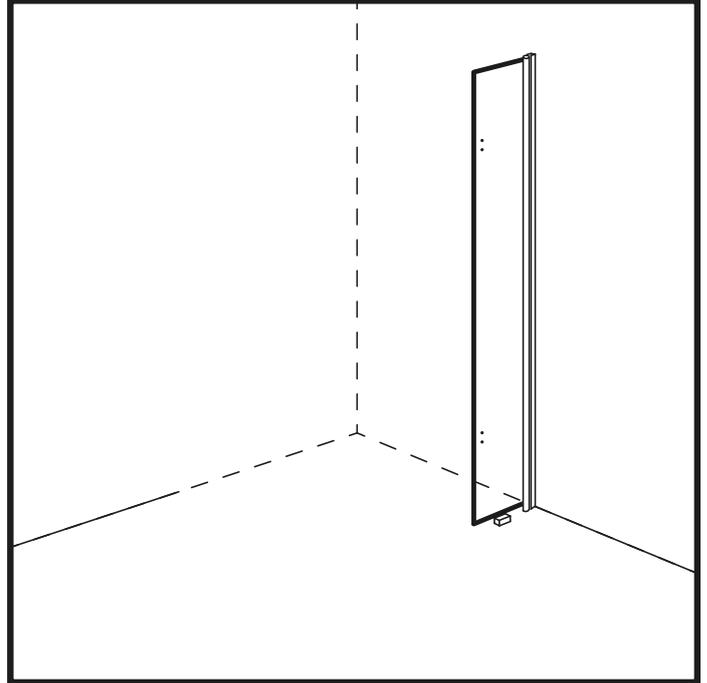


Figure 4

7. To attach the profile, apply silicone to the edges of the profile and place it on the wall, according to the previously marked locations. (Figure 3)

8. Secure the profile with screws. Remove any excess silicone that has been squeezed out between the glass and the U-profile.

9. Place wooden blocks on the floor (maximum thickness 10 mm) to support the door glass from the package, which already has the manufacturer-installed single hinge attached. (Figure 4)

NB! Make sure that the glass does not come into contact with the floor tiles, as it is tempered glass and may shatter upon impact!

EN 

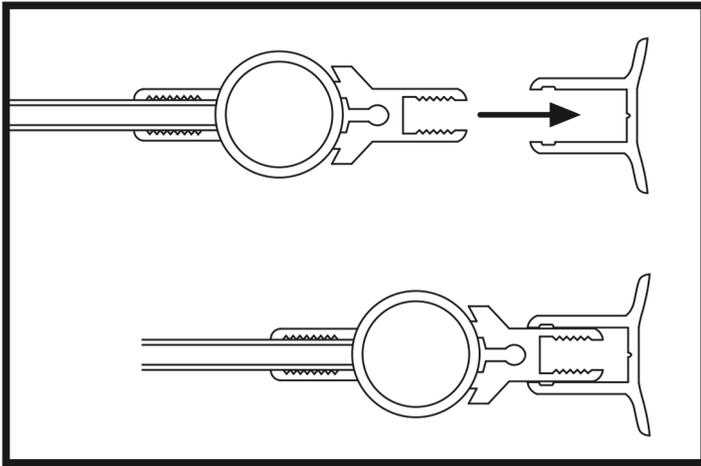


Figure 5

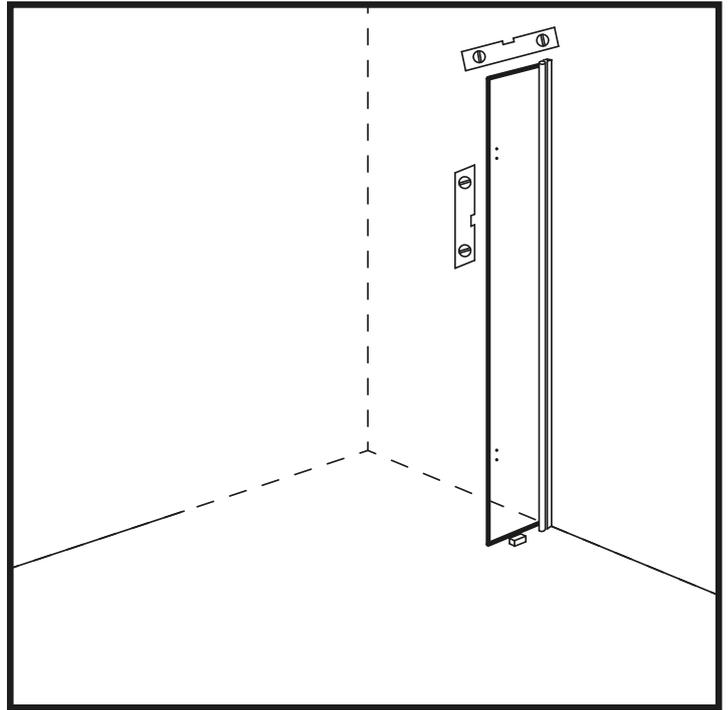


Figure 6

10. Support the glass with its bottom edge on the blocks. Carefully slide the glass with the single hinge into the wall-mount profile, facing toward the wall. (Figure 5)

11. Make sure that the glass is properly secured inside the hinge profile and that the edge of the glass is plumb. (Figure 6)

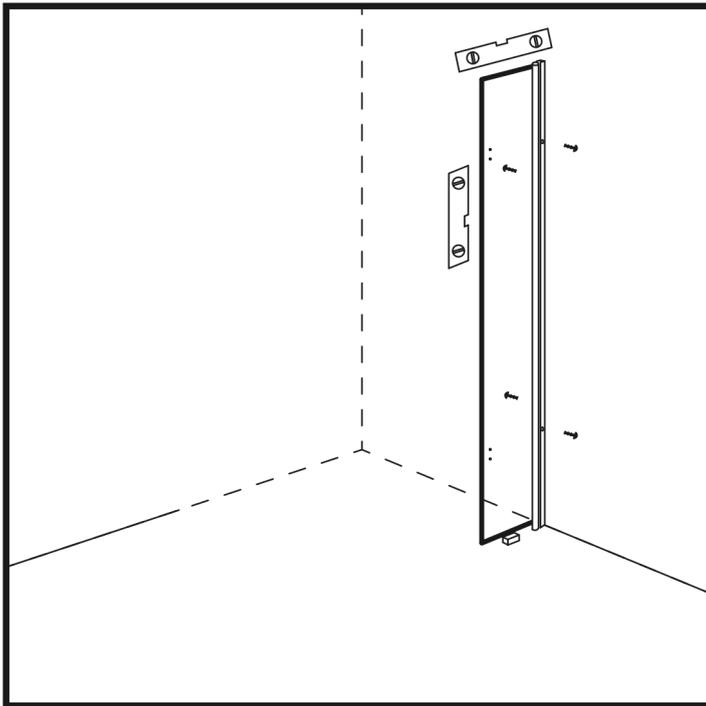


Figure 7

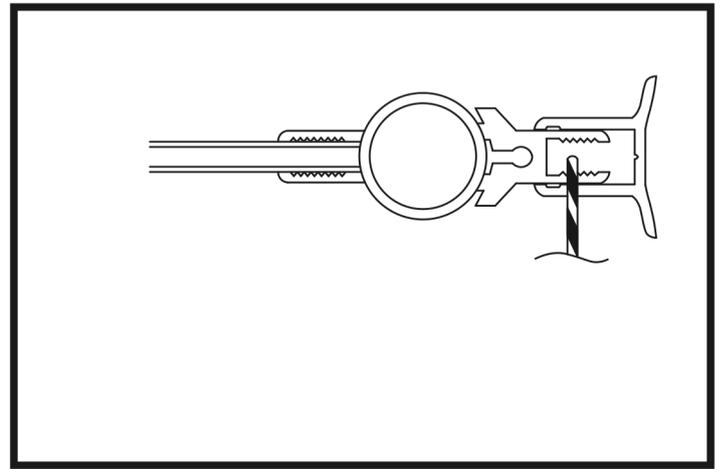


Figure 8

12. Mark the screw mounting positions on the profile from both inside and outside the shower. Measure and mark one side of the profile about 10 cm from the top and bottom, and the other side at about 20 cm. (Figure 7)

NB! To ensure the shower glass stays firmly in place, it is important that the screws are not aligned with each other.

13. Begin by drilling the top hole, going through both the hinge profile and the hinge. Drill the holes carefully so that the drill only passes through one half of the profiles, not the entire product. (Figure 8)

14. Attach the hinge to the hinge profile by screwing the stainless steel screws (4 pcs) included in the kit into the drilled holes and add the decorative covers.

NB! Do not overtighten the screws!
Overtightening may cause the screws to break and damage the profile.

EN 

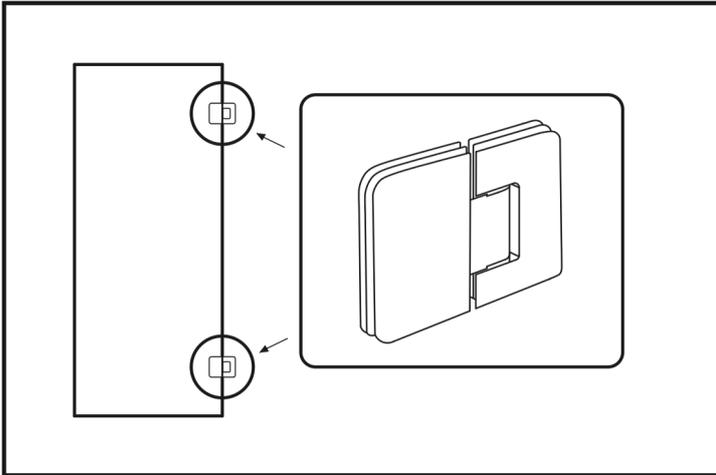


Figure 9

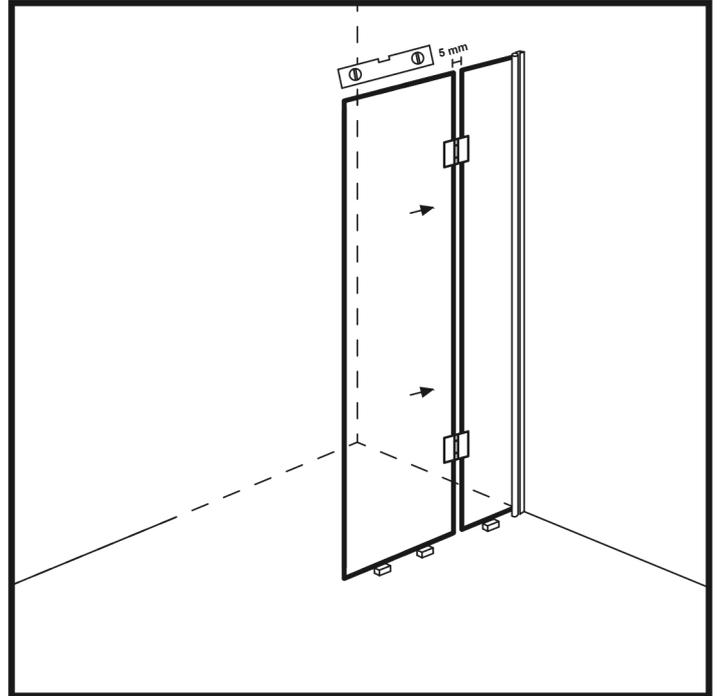


Figure 10

15. Install the hinges to the glass using the screws provided. (Figure 9)

16. Place wooden blocks (max. thickness 10 mm) on the floor where you can support the door glass in the package. (Figure 10)

NB! Make sure that the glass does not come into contact with the floor tiles, as it is tempered glass and may shatter upon impact!

17. Before installing the door glass, ensure that after adding the door, there is approximately a 5 mm gap between the door and the already installed glass wall to later accommodate the seal.

18. Support the glass with its bottom edge on the blocks. Carefully move the door glass toward the other glass wall and secure the hinges.

19. Use a spirit level to ensure that the glasses are level.

EN 

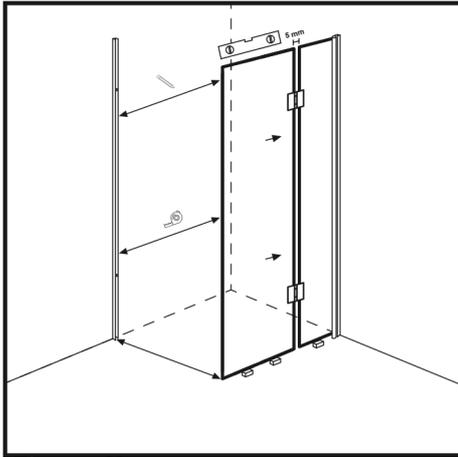


Figure 11

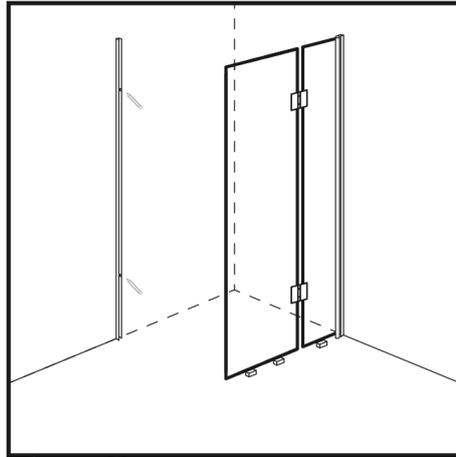


Figure 12

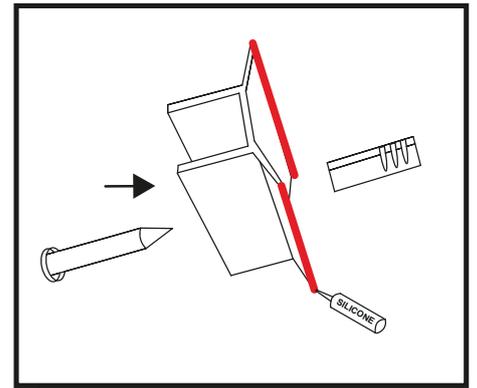


Figure 13

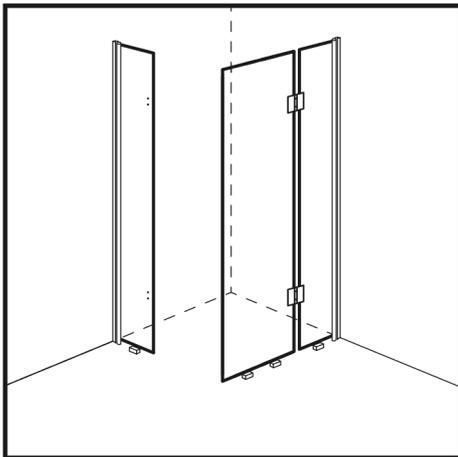


Figure 14

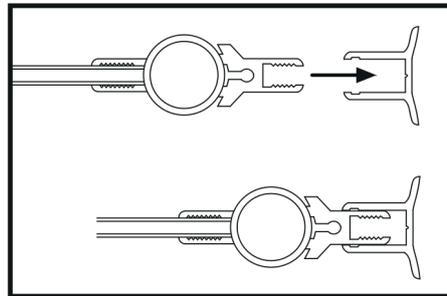


Figure 15

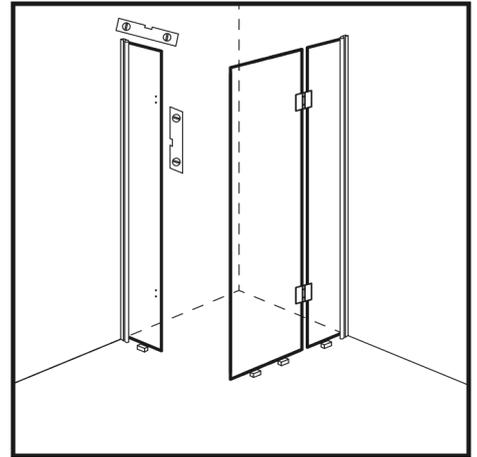


Figure 16

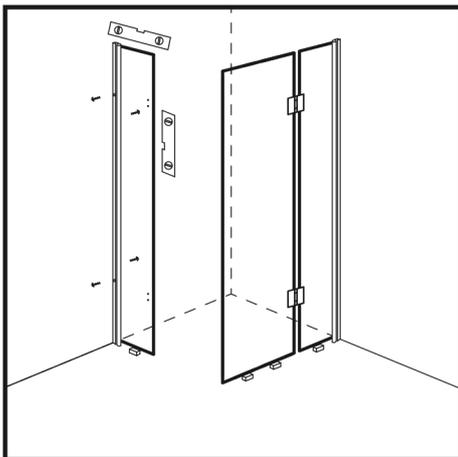


Figure 17

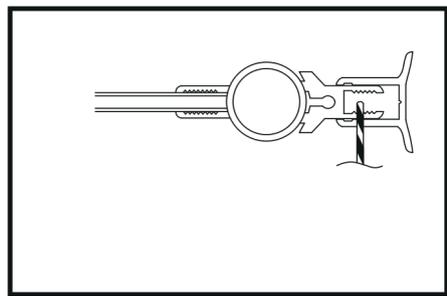


Figure 18

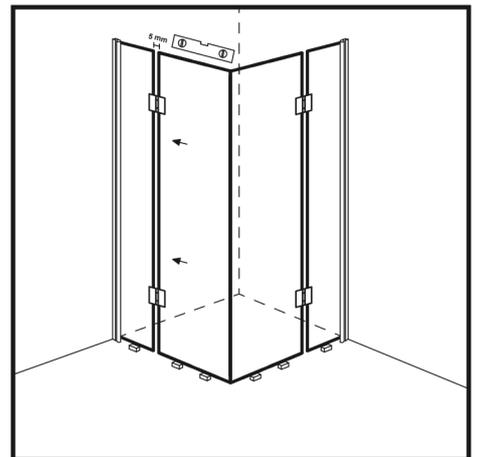


Figure 19

20. Before you start installing the second shower door, double-check all measurements once again. After installing the second door, the outer vertical edges of the doors, along with the magnetic seals, must align correctly.

21. Repeat steps 2-19 with the second door glass. (Figures 11-19)

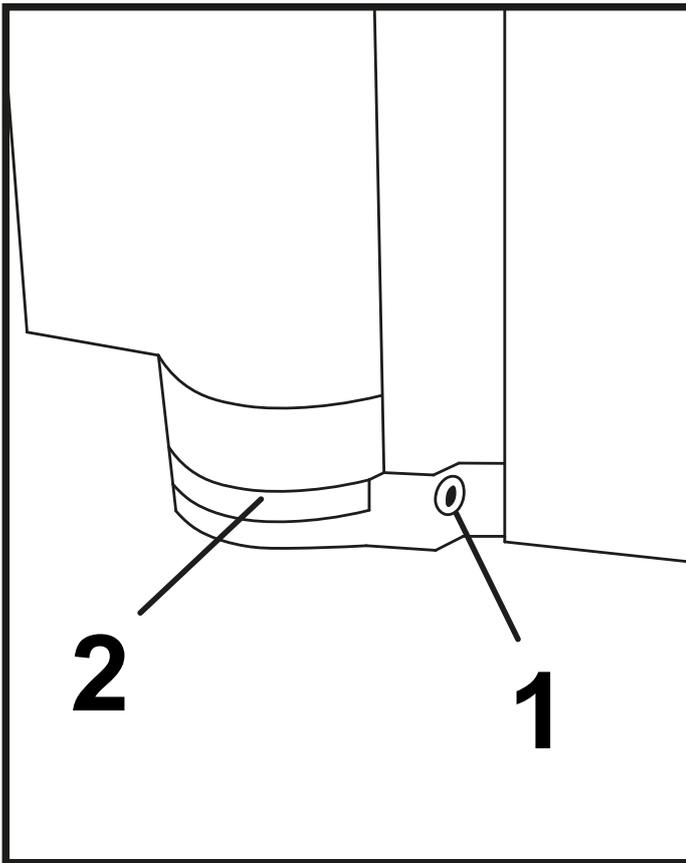


Figure 20

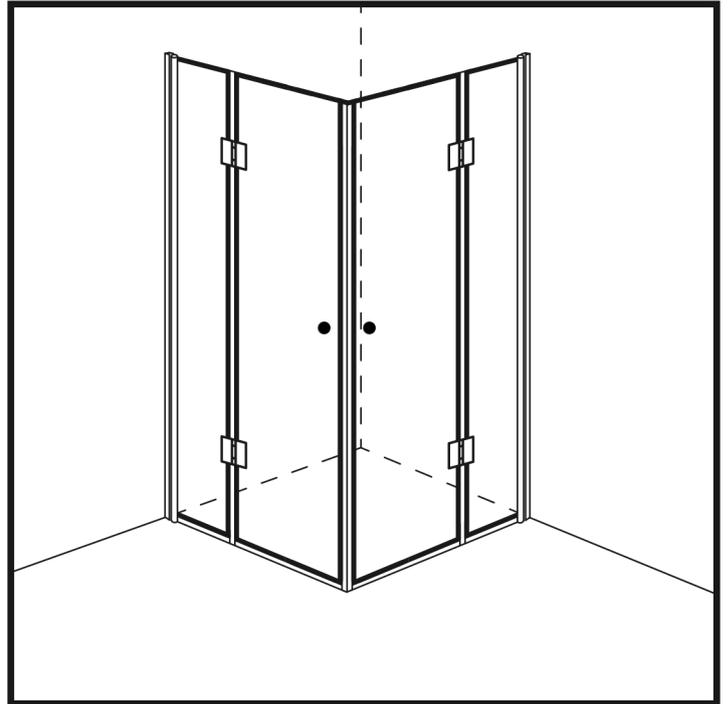


Figure 21

22. To adjust the mono hinge, loosen both mounting screws (1) on the washer by a few turns using the included Allen key. (Figure 20)

23. Move the glass (2) to the desired position where you want to secure the door.

24. Once the glass (2) is in the desired position, tighten the washer mounting screws (1).

NB! Do not overtighten the screws! Overtightening may cause the screws to break and damage the profile.

25. Remove the blocks from under the glass. (Figure 21)

26. Install the seals included in the kit along the bottom edge of the glass and the longer seals on the vertical sides of the door.

27. Install the handles included in the package.

28. If the installed profiles have protective films on them, remove them.