

AMELIA SHOWER ENCLOSURE INSTALLATION INSTRUCTIONS

EN www.andres.glass



PLEASE HANDLE AND INSTALL THE GLASS WITH CARE, AS THE TEMPERED GLASS CAN BREAK IF ITS CORNERS AND EDGES COME INTO CONTACT WITH A HARD SURFACE!

Before installing or using the product, read the installation, usage, maintenance and warranty instructions.



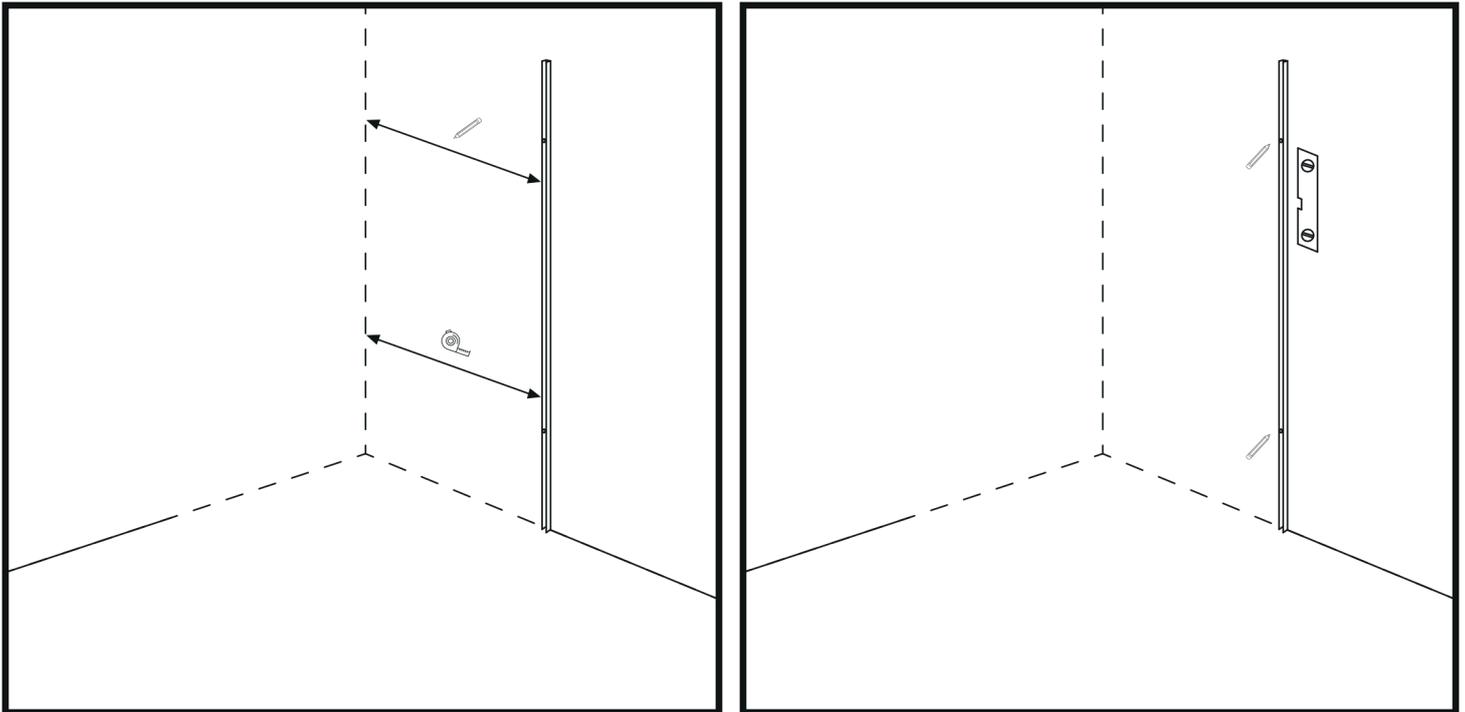


Figure 1

1. Measure the distance of the hinge bar profile from the parallel wall according to the planned shower enclosure and make a mark. (Figure 1)
2. Using a spirit level, place the hinge bar profile vertically on the wall so that the edge is flush with the edge of the floor.
3. Mark the holes in the profile (the locations of the dowel holes) on the wall and remove the profile from the wall. If marks remain on the edges of the ceramic tiles, try turning the profile the other way and making the marks again.
4. Drill holes in the marked locations for the dowels included in the kit. Use the designated milling cutter or a drill without hammer mode to avoid damaging the ceramic tiles.
5. Clean the holes and the wall from dust and push the dowels into the drilled holes so that the outer end of the dowel is flush with the wall.

EN 

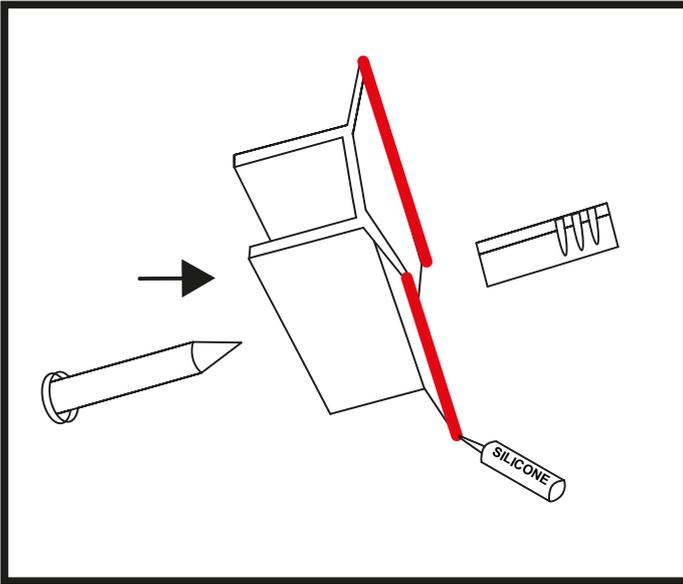


Figure 2

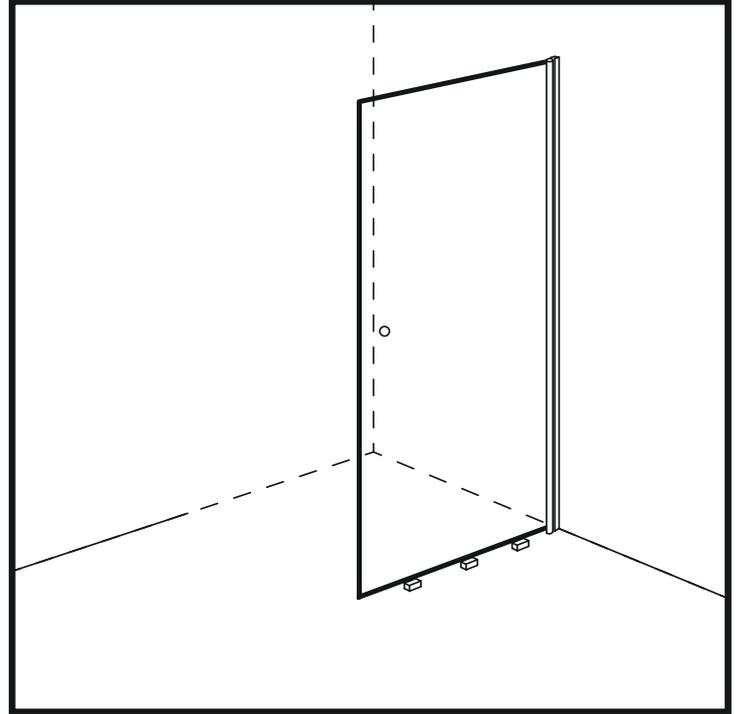


Figure 3

6. To attach the profile, apply silicone to the edges of the profile and place it on the wall, according to the previously marked locations. (Figure 2)

7. Secure the profile with screws. Remove any excess silicone that has been squeezed out between the glass and the U-profile.

8. Place wooden blocks on the floor (maximum thickness 10 mm) to support the door glass from the package, which already has the manufacturer-installed single hinge attached. (Figure 3)

NB! Make sure that the glass does not come into contact with the floor tiles, as it is tempered glass and may shatter upon impact!

EN 

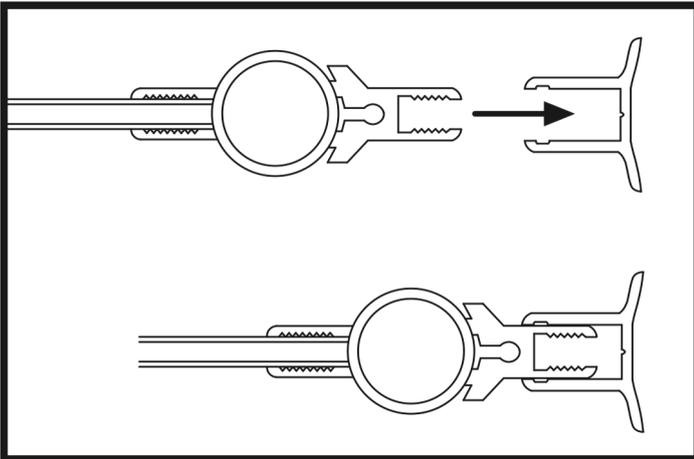


Figure 4


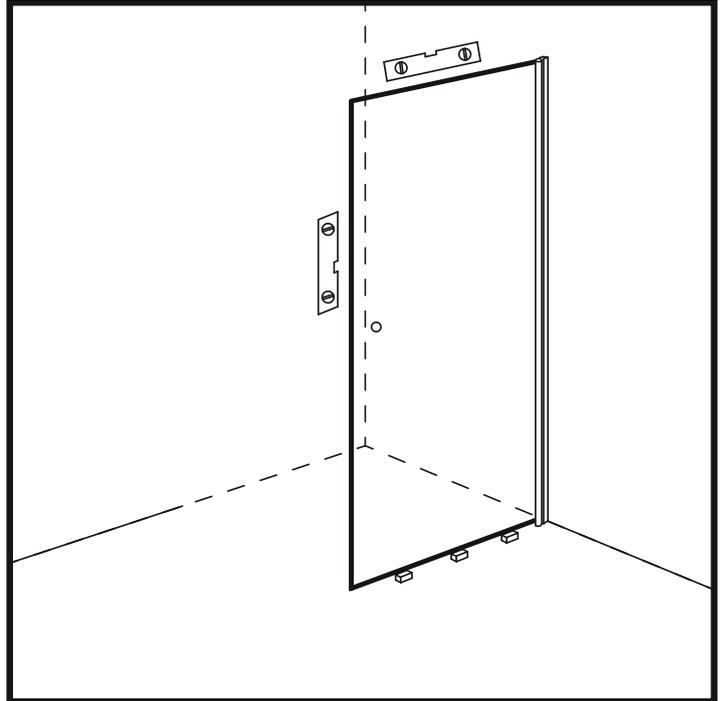


Figure 5

9. Carefully rest the bottom edge of the glass on the support blocks. Slide the mono-hinged glass into the wall-mounted hinge profile, with the movement directed toward the wall. (Figure 4)

10. Make sure that the glass is properly secured inside the hinge profile and that the edge of the glass is plumb. (Figure 5)

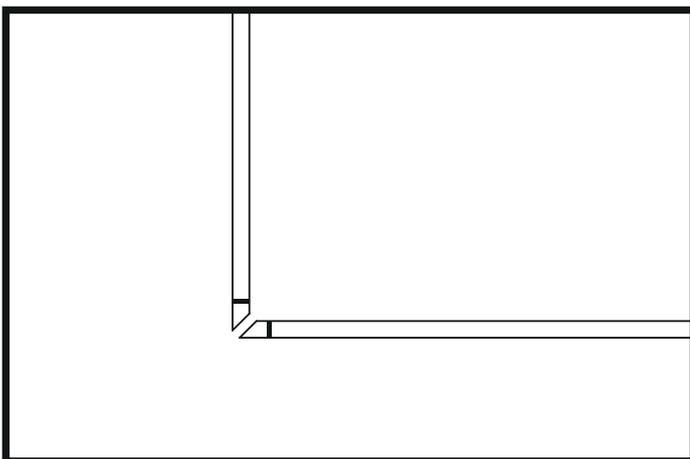

Top view: Figure 6

11. Before securing the first door and installing the second door, double-check the measurements to ensure that the glass doors, along with the magnetic seals, align properly. (Figure 6)

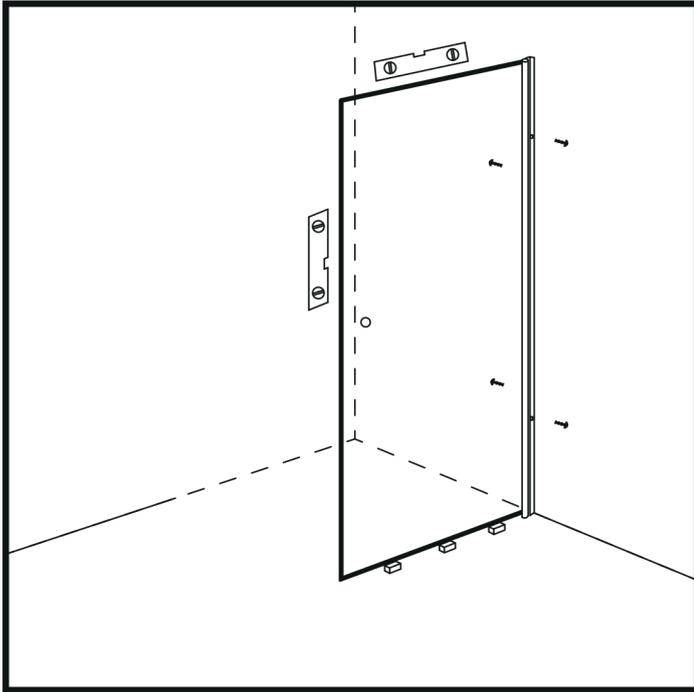


Figure 7

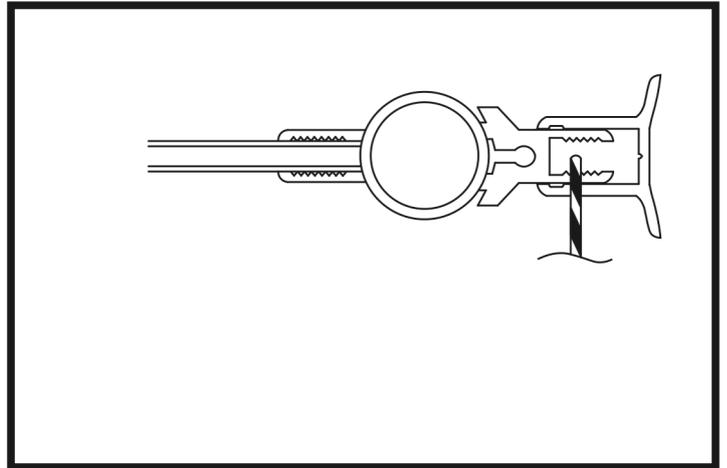


Figure 8

12. Mark the screw mounting positions on the profile from both inside and outside the shower. Measure and mark one side of the profile about 10 cm from the top and bottom, and the other side at about 20 cm. (Figure 7)

NB! To ensure the shower glass stays firmly in place, it is important that the screws are not aligned with each other.

13. Begin by drilling the top hole, going through both the hinge profile and the hinge. Drill the holes carefully so that the drill only passes through one half of the profiles, not the entire product. (Figure 8)

14. Attach the hinge to the hinge profile by screwing the stainless steel screws (4 pcs) included in the kit into the drilled holes and add the decorative covers.

NB! Do not overtighten the screws!
Overtightening may cause the screws to break and damage the profile.

EN 

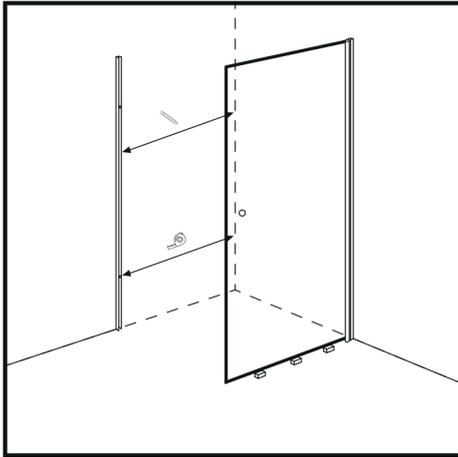


Figure 9

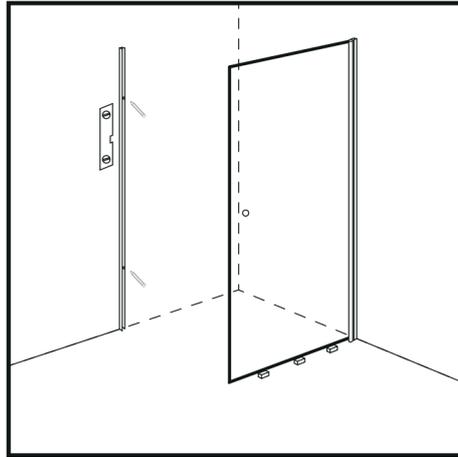


Figure 10

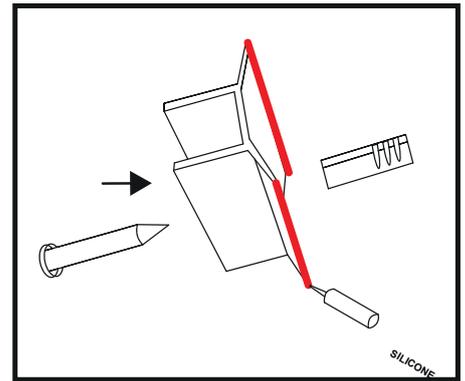


Figure 11

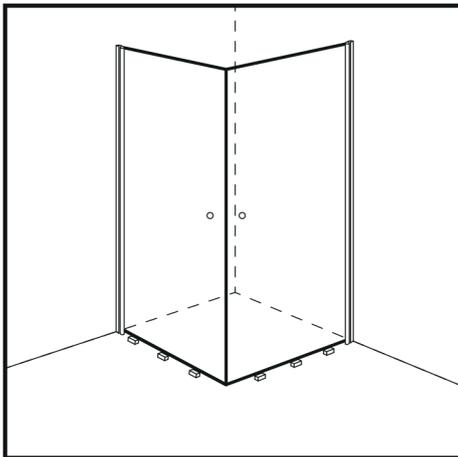


Figure 12

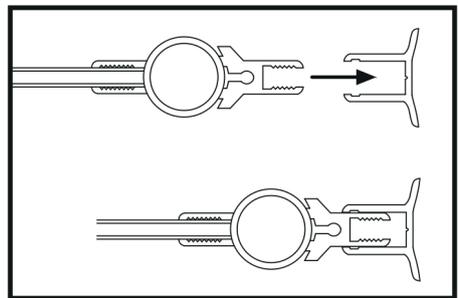


Figure 13

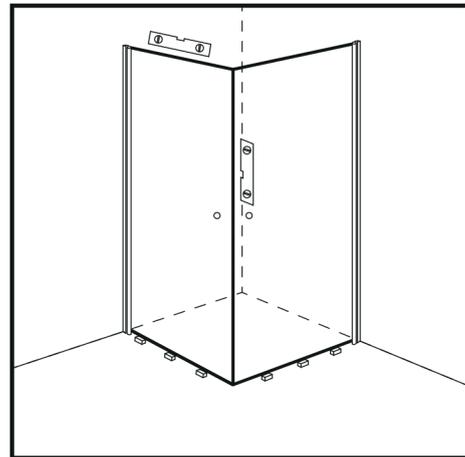


Figure 14

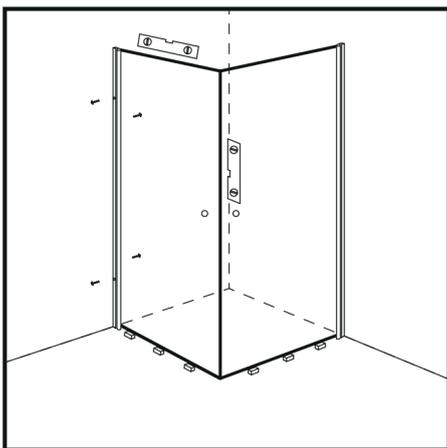


Figure 15

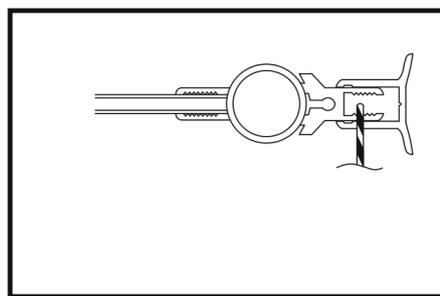


Figure 16

15. Repeat steps 1-14 with the second door glass. Double-check the measurements once more!
(Figures 9-16)

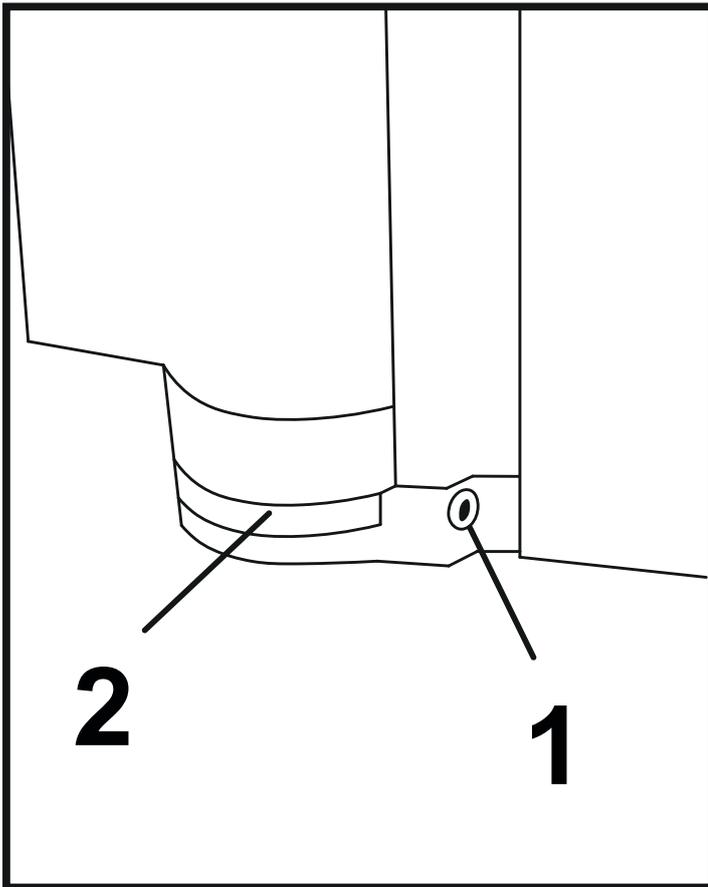


Figure 17

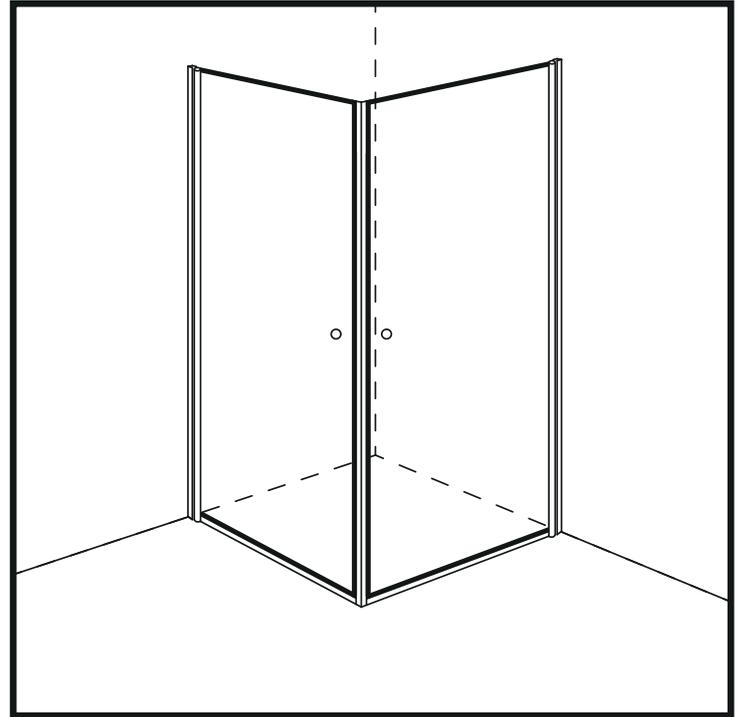


Figure 18

16. To adjust the mono hinges, loosen both mounting screws (1) on the washer by a few turns using the included Allen key. (Figure 17)

17. Move the glass (2) to the desired position where you want to secure the door.

18. Once the glass (2) is in the desired position, tighten the washer mounting screws (1).

NB! Do not overtighten the screws! Overtightening may cause the screws to break and damage the profile.

19. Remove the blocks from under the glass. (Figure 18)

20. Install the brush seals included in the kit along the bottom edges of the glass doors and the magnetic seals vertically at the intersection of the two doors.

NB! If necessary, cut the seals to the appropriate size.

21. Install the handles included in the package.

22. If the protective films are still on the installed profiles, remove them.