

VERONICA SHOWER ENCLOSURE INSTALLATION INSTRUCTIONS

EN www.andres.glass



PLEASE HANDLE AND INSTALL THE GLASS WITH CARE, AS THE TEMPERED GLASS CAN BREAK IF ITS CORNERS AND EDGES COME INTO CONTACT WITH A HARD SURFACE!

Before installing or using the product, read the installation, usage, maintenance and warranty instructions.



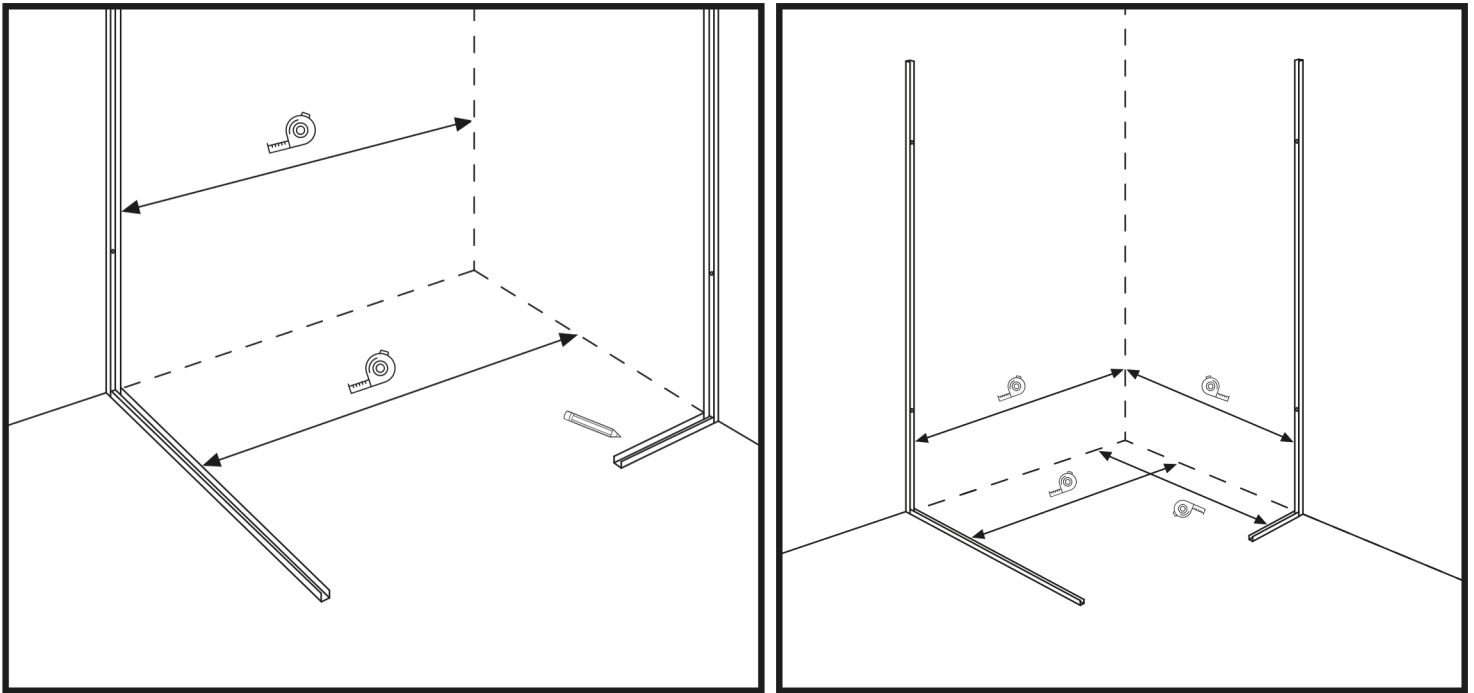


Figure 1

1. First install the fixed glass panels with the U-profile, i.e. the smaller part of the shower door and the wider part of the shower enclosure, together with the telescopic tubes. (Figure 1)
2. Choose the distances of the U-profiles from the opposite wall according to the designed position of your shower enclosure.
3. Measure the required distances from the wall corner and make marks. The distance must be measured both on the floor and on the wall.
4. Repeat the following steps 5–15, first with the glass panel on one side of the corner and then with the glass panel on the other side.

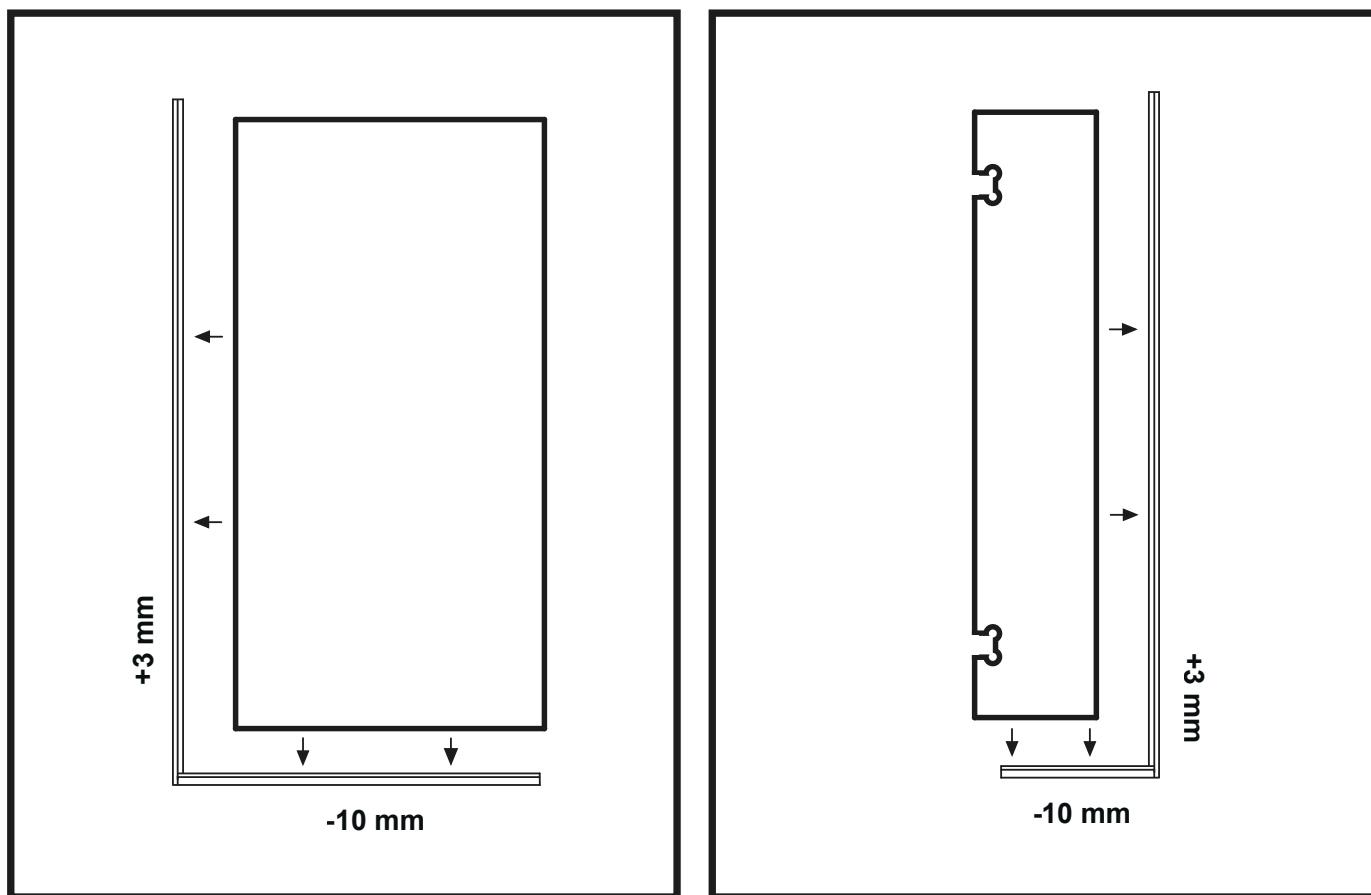


Figure 2

5. Check the length of the U-profile and the glass. The bottom U-profile should be about 10 mm shorter than the glass and the longer vertical U-profile should be about 3 mm longer than the glass. (Figure 2)

NB! As the floors and walls may have varying slopes, you can adjust the glass accordingly if necessary.

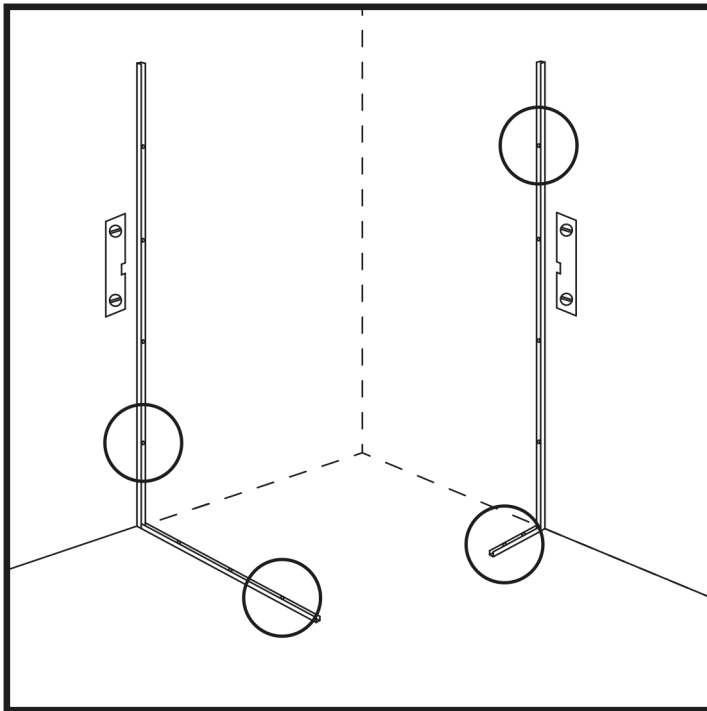


Figure 3

6. Place the longer U-profile vertically on the wall using a level so that the edge of the U-profile is flush with the marked dot and the end of the slat is against the floor. (Figure 3)

7. Mark the holes in the profiles (the locations of the dowel holes) on the wall and remove the profile. If marks remain on the edges of the ceramic tiles, try turning the profile the other way and making the marks again.

8. Drill holes in the marked locations for the dowels included in the kit. Use the designated milling cutter or a drill without hammer mode to avoid damaging the ceramic tiles.

9. Clean the holes and the wall from dust and push the dowels into the drilled holes so that the outer end of the dowel is flush with the wall.

10. Place the vertical profile on the wall and secure with screws.

11. Place the shorter U-profile on the floor, with the end against the U-profile on the wall and parallel to the opposite wall.

12. Check the distance with a tape measure and mark the positions of the profiles on the floor.

13. Remove the profile.

14. Clean the floor surface under the shorter U-profile with a suitable cleaning agent.

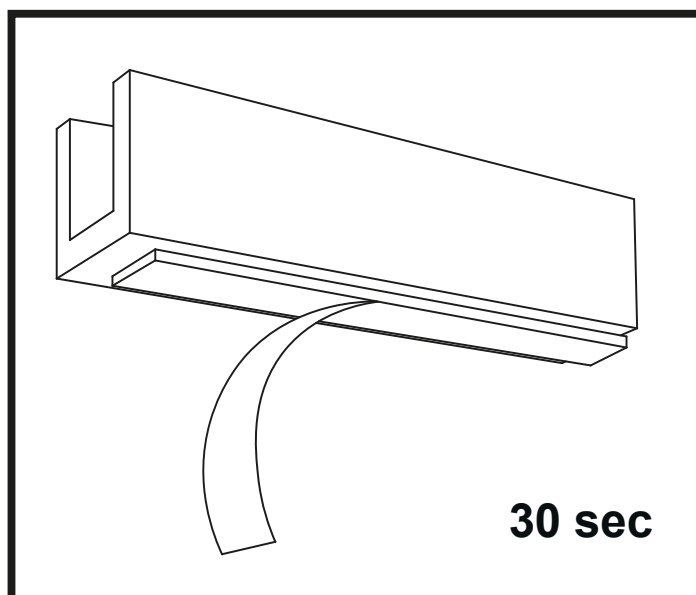


Figure 4

15. Remove the backing film from the double-sided tape on the profile and place the profile on the floor in the marked location. Press the lath firmly, holding the pressure for about 30 seconds. (Figure 4)

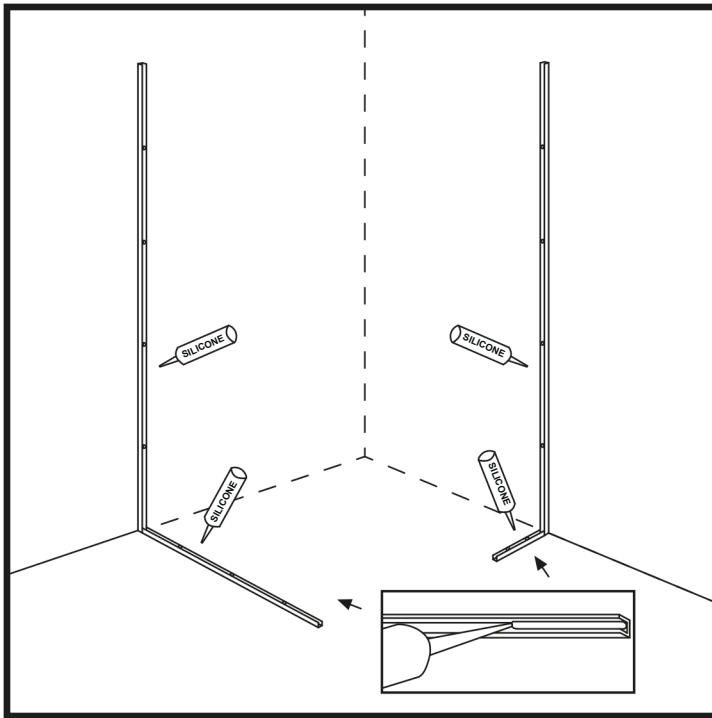


Figure 5

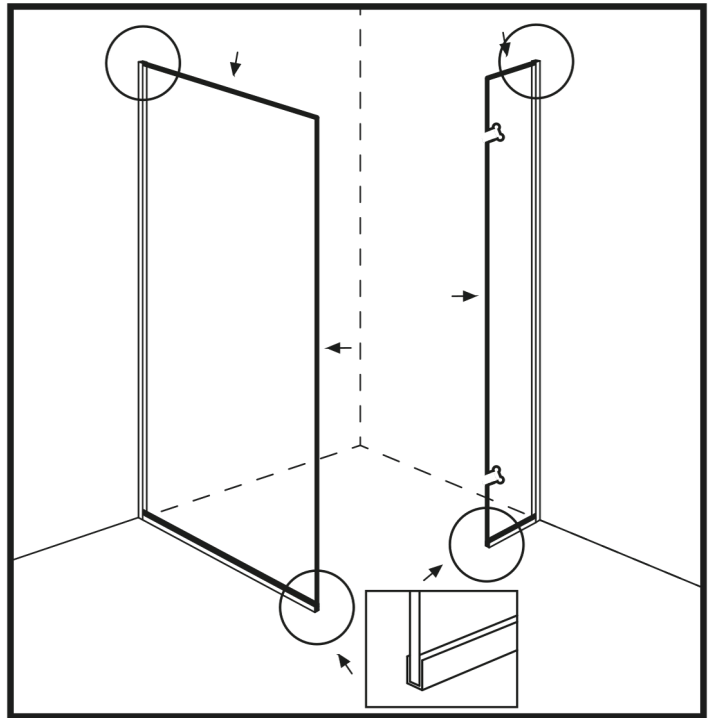


Figure 6

16. Fill the U-profiles on the wall and floor with an even silicone strip. (Figure 5)

17. Place the glass panels between the U-profiles and press them both towards the wall and downwards so that the silicone adheres to the glass. (Figure 6)

NB! Do not forcefully push the glass against the U-profile, as this may cause the glass to break!

18. Make sure that the outer vertical edge of the glass is aligned with the edge of the bottom U-profile.

NB! If the floor has a slight slope, you may add supporting wedges between the glass and the U-profile as needed.

19. Remove any excess silicone that has been squeezed out between the glass and the U-profile.

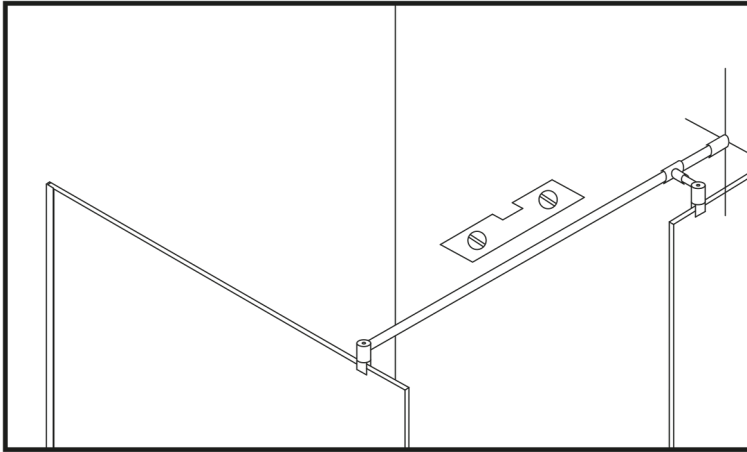


Figure 7

20. The telescopic tube of the shower solution consists of two parts: the longer telescopic tube, which must be installed at a right angle to the wall. The shorter telescopic tube must be attached to the longer telescopic tube, with the distance determined according to the planned position of the shorter fixed glass wall. (Figure 7)

21. The glass fixing must be located no more than 20 cm from the outer corner of the wider glass panel. The telescopic tube for the shorter glass panel should be installed as close as possible to the outer edge of the glass, approximately 5 cm away.

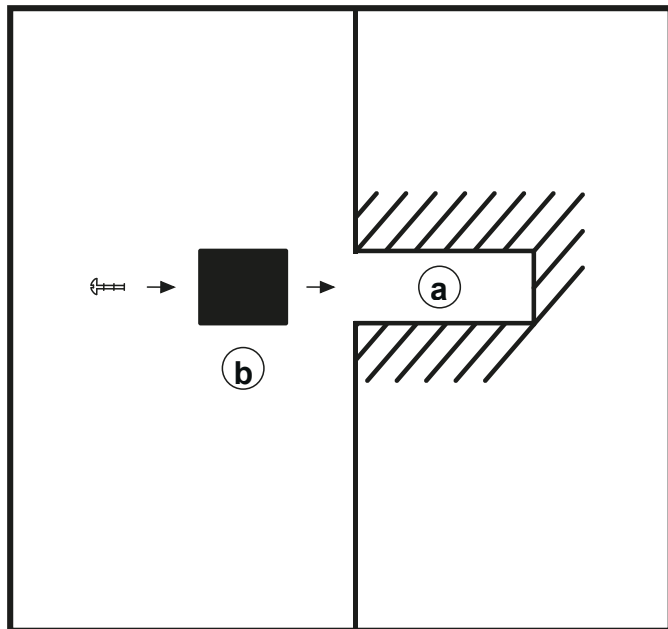


Figure 8

22. Install the seals supplied with the tubes between the telescopic tube mounting brackets (3), i.e. the parts that attach to the glass, so that the glass does not come into contact with the metal. (Figure 9)

23. Carefully place the telescopic tubes on the glass, in the previously measured and planned location. Make sure that the telescopic tubes are vertically level. (Figure 7)

24. Make a mark on the wall (Figure 7) for drilling the mounting hole (a) (Figure 8) and remove the telescopic tube.

25. Drill the hole for the dowel (a) at the marked location, remove any dust from the hole, and insert the dowel. (Figure 8)

26. Unscrew the screw (1) on the telescopic tube (see Figure 9) and remove the wall-mounted part (b) (see Figure 8).

27. Insert part (b) into the previously drilled hole (a) in the wall and secure it with a screw. (Figure 8)

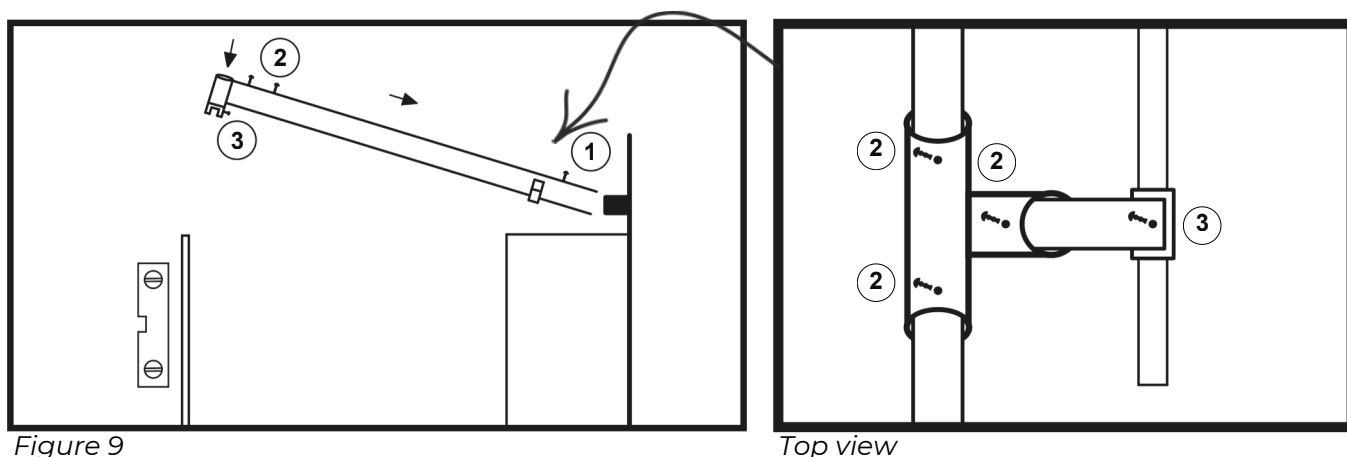


Figure 9

Top view

28. Take the telescopic tube and carefully insert the wall fixing (b) into the telescopic tube, then place the other ends (3) in the planned positions on the glass panels. (Figure 9)

29. Fasten it, but do not fully tighten screw (1) yet.

NB! The mounting point must be oriented upwards!

30. Secure the telescopic mount to the glass with screw (3).

NB! It is important that you have previously installed the gaskets included in the set between part (3) Metal parts must not come into contact with the glass, as this may cause the glass to break.

31. Adjust the glass using a spirit level and later, after installing the door glass, secure the telescopic tube with screws (2), positioned facing upwards. (Figure 9)

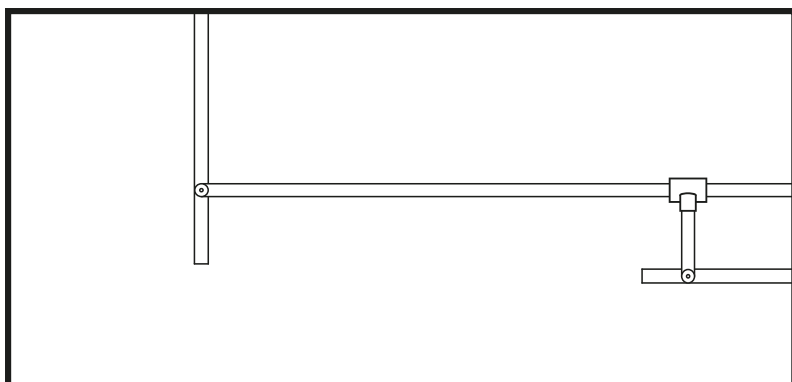


Figure 10

32. After installation, the position of the telescopic tubes, viewed from above, should look as shown in Figure 10.

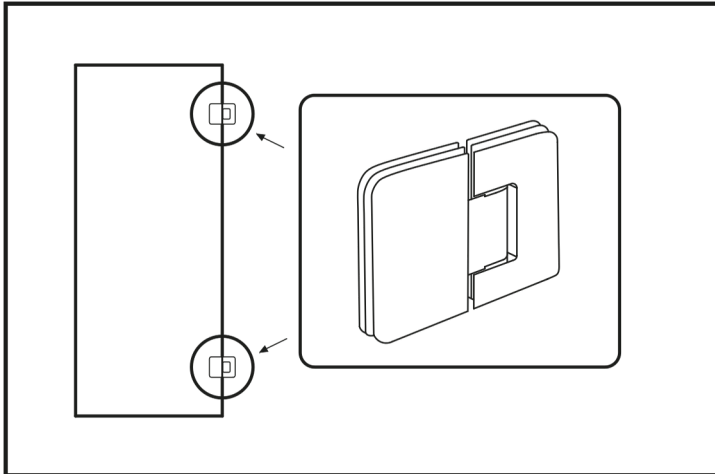


Figure 11

33. Attach the hinges to the door glass panels using the screws supplied in the kit. (Figure 11)

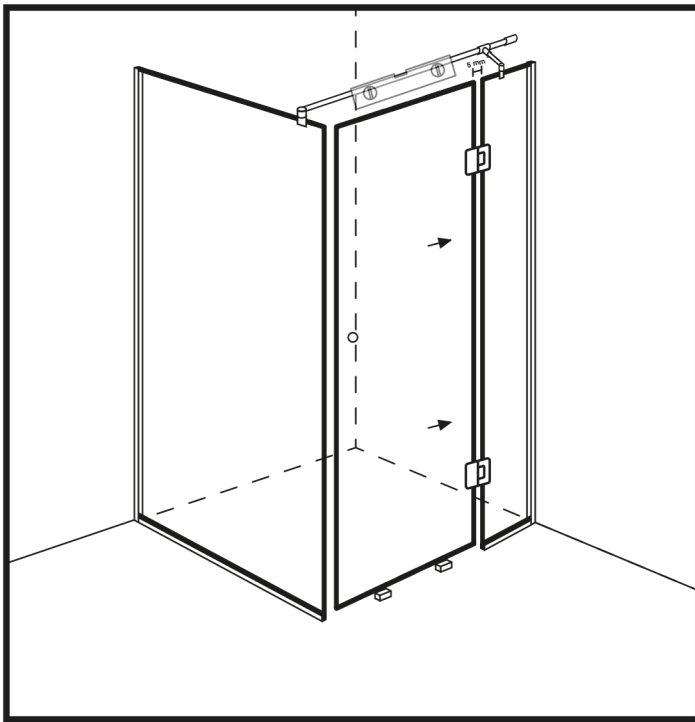


Figure 12

34. Place wooden blocks on the floor, maximum thickness 1 cm, on which you can support the door glass panel. (Figure 12)

NB! Make sure that the glass does not come into contact with the floor tiles, as it is tempered glass and may shatter upon impact!

35. Before installing the door glass, make sure that after adding the door glass, there is a gap of approximately 22 mm between the door and the stationary glass wall, where the magnetic seal will later fit.

36. Support the glass with its bottom edge on the blocks. Carefully move the door glass toward the other glass wall and secure the hinges.

37. Check with a spirit level that the glass is vertical, that the glass panels are parallel to each other and that the magnetic seal meets correctly, then secure the tube with screws (2) (Figure 9).

38. Remove the blocks from under the glass.

39. Install the seal supplied in the kit on the lower edge of the door glass panel, and the longer seals on the vertical sides of the door.

40. Install the handle included in the package.

41. If the protective films are still on the installed profiles, remove them.

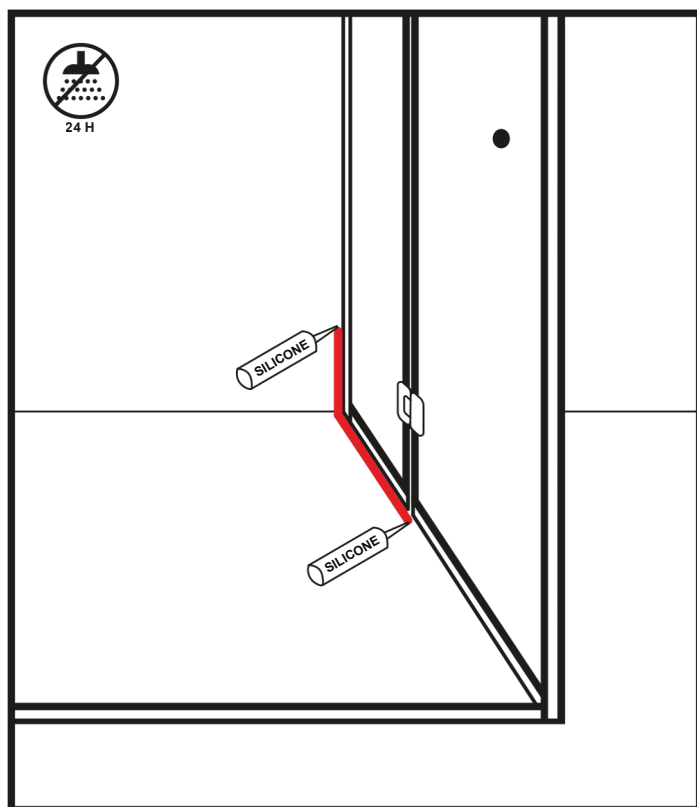


Figure 13

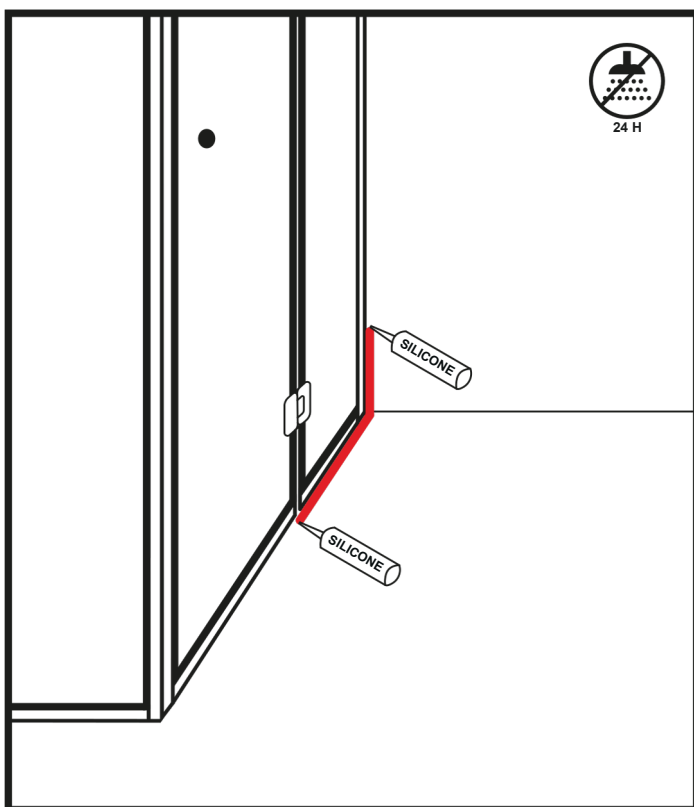


Figure 14

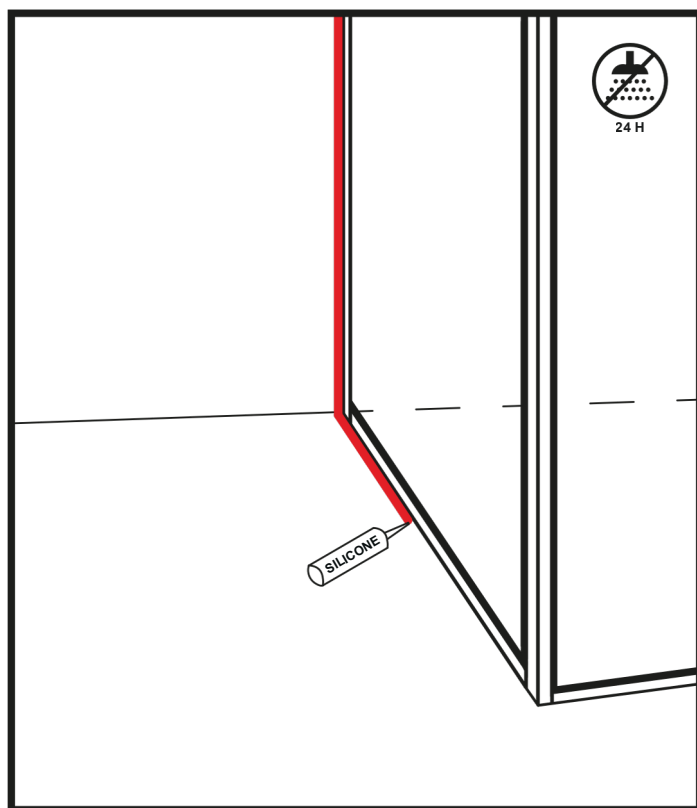


Figure 15

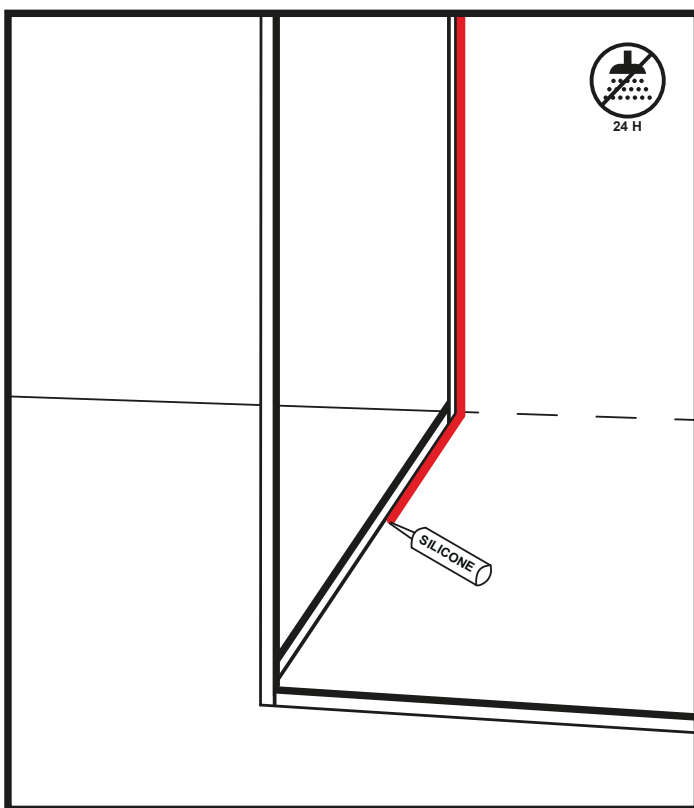


Figure 16

42. Apply an even bead of silicone to the edges of the U-profile on the inside (Figure 13 and Figure 16) and outside (Figure 14 and Figure 15) of the shower enclosure.

43. Remove excess silicone.

EN 

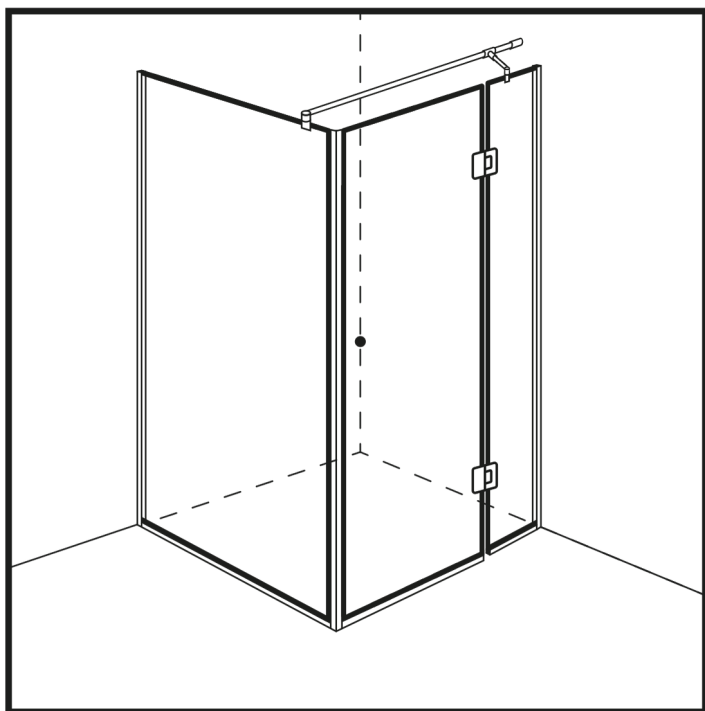


Figure 17

44. Avoid getting water on the silicone for the next 24 hours until it is fully cured.